

IBM Field Engineering
Maintenance Diagrams

1130 Computing System
Features

PREFACE

This manual contains maintenance diagrams for the following features of the IBM 1130 Computing System:

- Synchronous Communications Adapter
- IBM 2501 Card Reader Adapter
- IBM 1231 Optical Mark Page Reader Adapter

Use the system diagrams at the engineering level of the equipment being serviced when there is a difference between the system diagrams and the maintenance diagrams in this manual.

Fourth Edition (May 1970)

This manual is a complete revision of SY26-4003-2 and obsoletes the previous edition.

Specifications contained herein are subject to change from time to time. Any such change will be reported in subsequent revisions or Field Engineering Supplements.

Copies of this and other IBM publications can be obtained through IBM Branch Offices.


A form for readers' comments is provided at the back of this publication. If the form has been removed, send your comments to IBM Corporation, General Systems Division, Product and Programming Publications, Boca Raton, Florida, 33432.

LEGEND.	iv	Diagram 65-50. Synchronize, Start Write, and Write	14
SYNCHRONOUS COMMUNICATIONS ADAPTER			
<u>Data Flow</u>			
Diagram 63-10. SCA Data Flow and Controls.	1		
<u>Functional Units</u>			
Diagram 64-10. DSW and Diagnostic Read Words 1 and 2	3		
Diagram 64-20. Clock Controls, CE Mode and Switches, and Diagnostic Mode.	4		
Diagram 64-30. Clocks, Phase Counter, and Advance/Retard.	5		
Diagram 64-40. Synchronize and Start Write	6		
Diagram 64-50. Read and Write.	7		
Diagram 64-60. Start Read and Checks.	9		
<u>Operations</u>			
Diagram 65-10. Synchronize, Start Write, and Write (Objectives and Operation).	10		
Diagram 65-20. Start Read and Read (Objectives and Operation).	11		
Diagram 65-30. Start Read (Part 1) and End Operation	12		
Diagram 65-40. Start Read (Part 2) and Read.	13		
2501 CARD READER ADAPTER			
<u>Data Flow</u>			
Diagram FR401. 2501 Card Reader Data Flow and Control.	15		
<u>Functional Units</u> None			
<u>Operations</u>			
Diagram FR411. 2501 Start Read or Program Load (Part 1 of 2)	16		
Diagram FR412. 2501 Start Read or Program Load (Part 2 of 2)	17		
Diagram FR413. 2501 Run In--NPRO	18		
Diagram FR501. 2501 Start--Run.	19		
Diagram FR511. 2501 Read (Part 1 of 2).	20		
Diagram FR512. 2501 Read (Part 2 of 2).	21		
1231 OPTICAL MARK PAGE READER ADAPTER			
<u>Data Flow</u>			
Diagram 83-10. 1231 Data Flow and Control	22		
<u>Functional Units</u>			
Diagram 84-10. 1231 OMPR Read	23		
<u>Operations</u> None			


LEGEND

In positive logic representation, signal levels are disregarded. The negator (N block symbol) is used to invert logic, not level. Passive elements (such as drivers and pulse shapers) generally are not shown, since they contribute nothing to the logic.


LOGICAL ELEMENTS

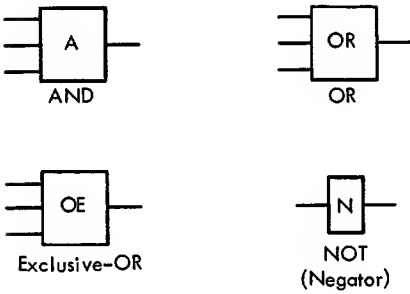

TIMING ELEMENTS

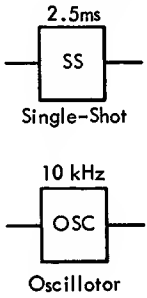


SWITCHES

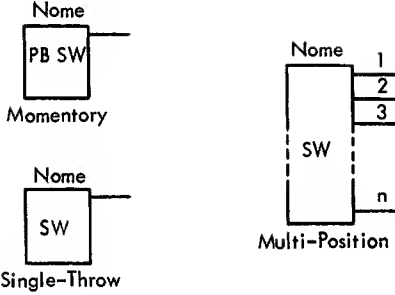

PASSIVE ELEMENTS




XX Abbreviations

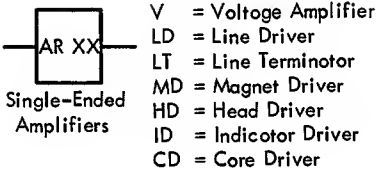

STORAGE ELEMENTS





REGISTERS AND COUNTERS

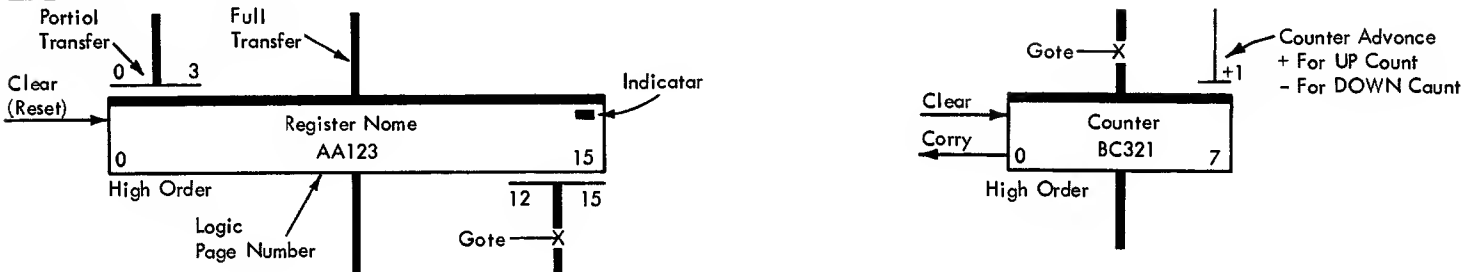

SHIFT REGISTERS



MISCELLANEOUS

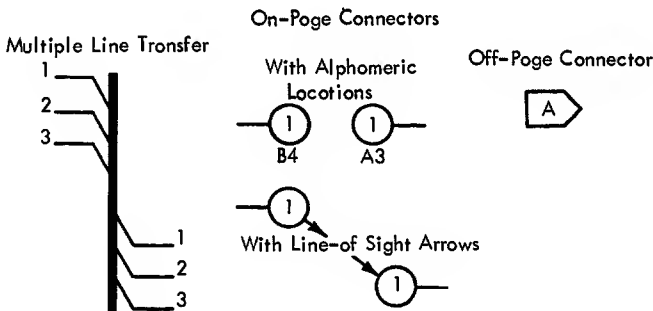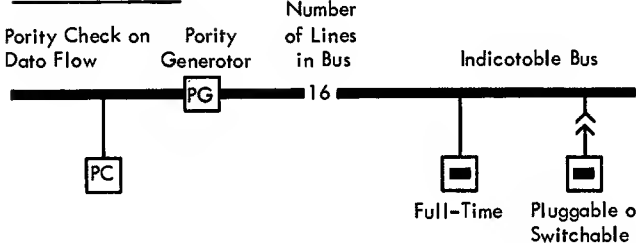

A

B

C

D

E

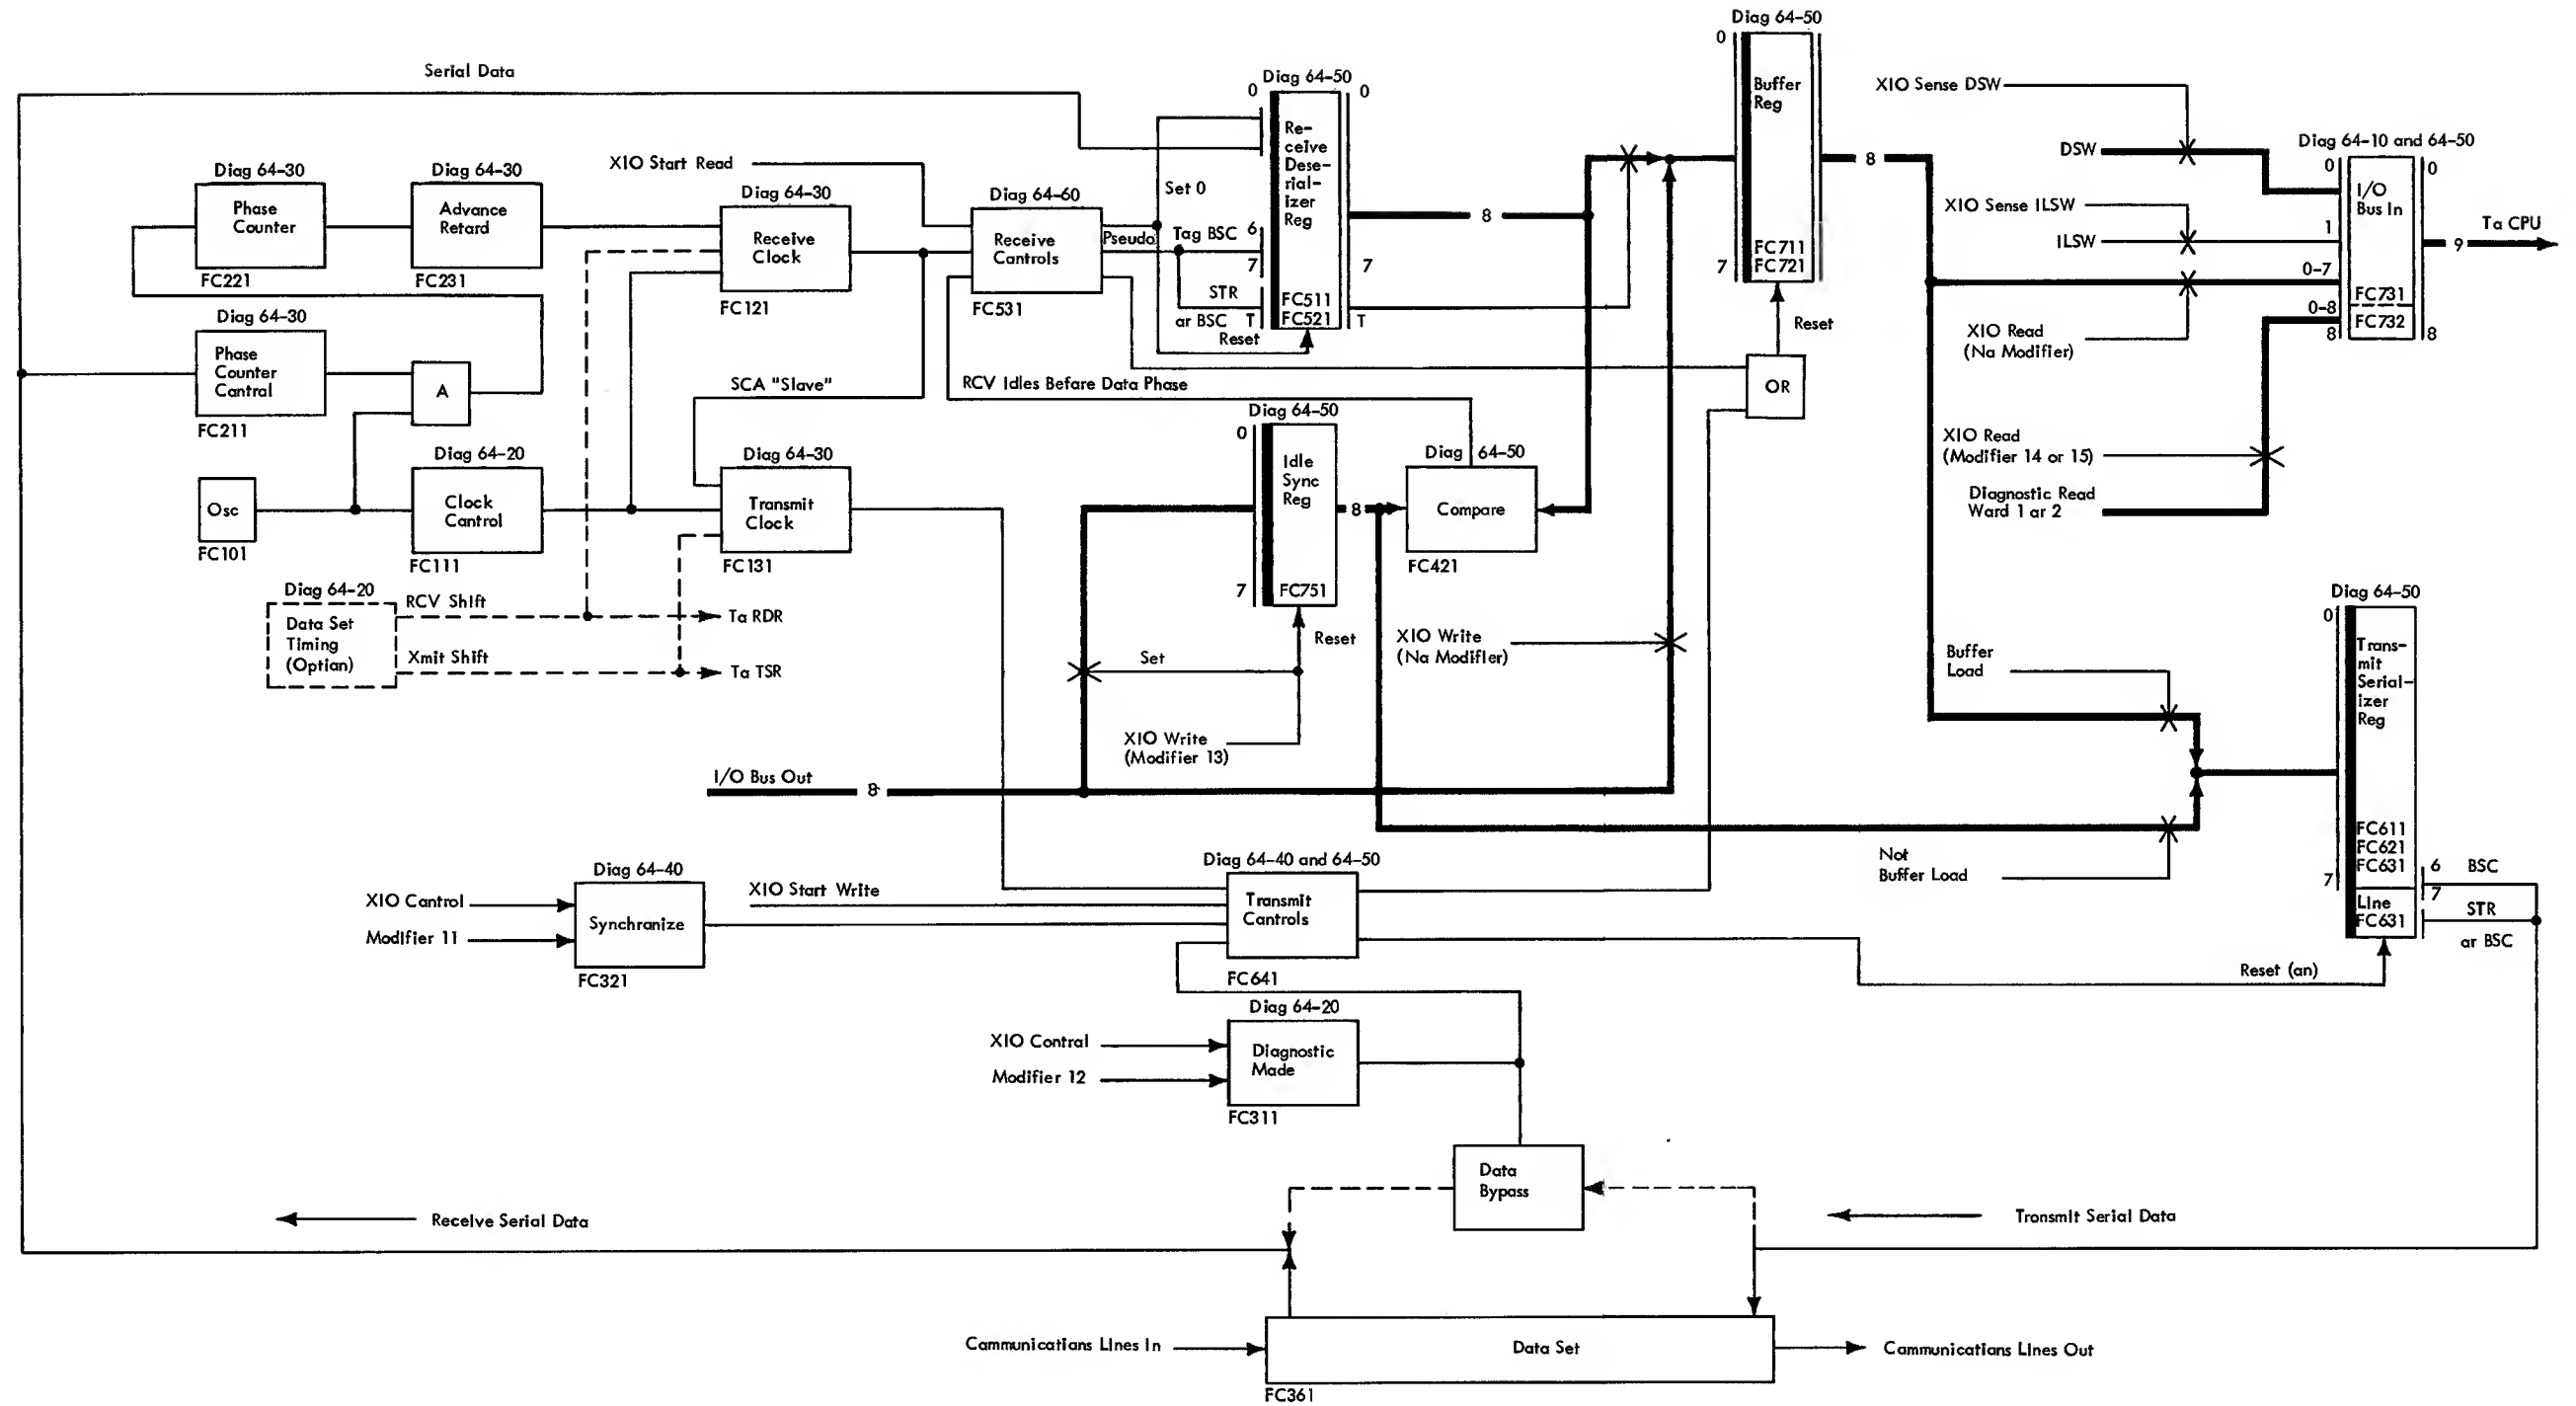
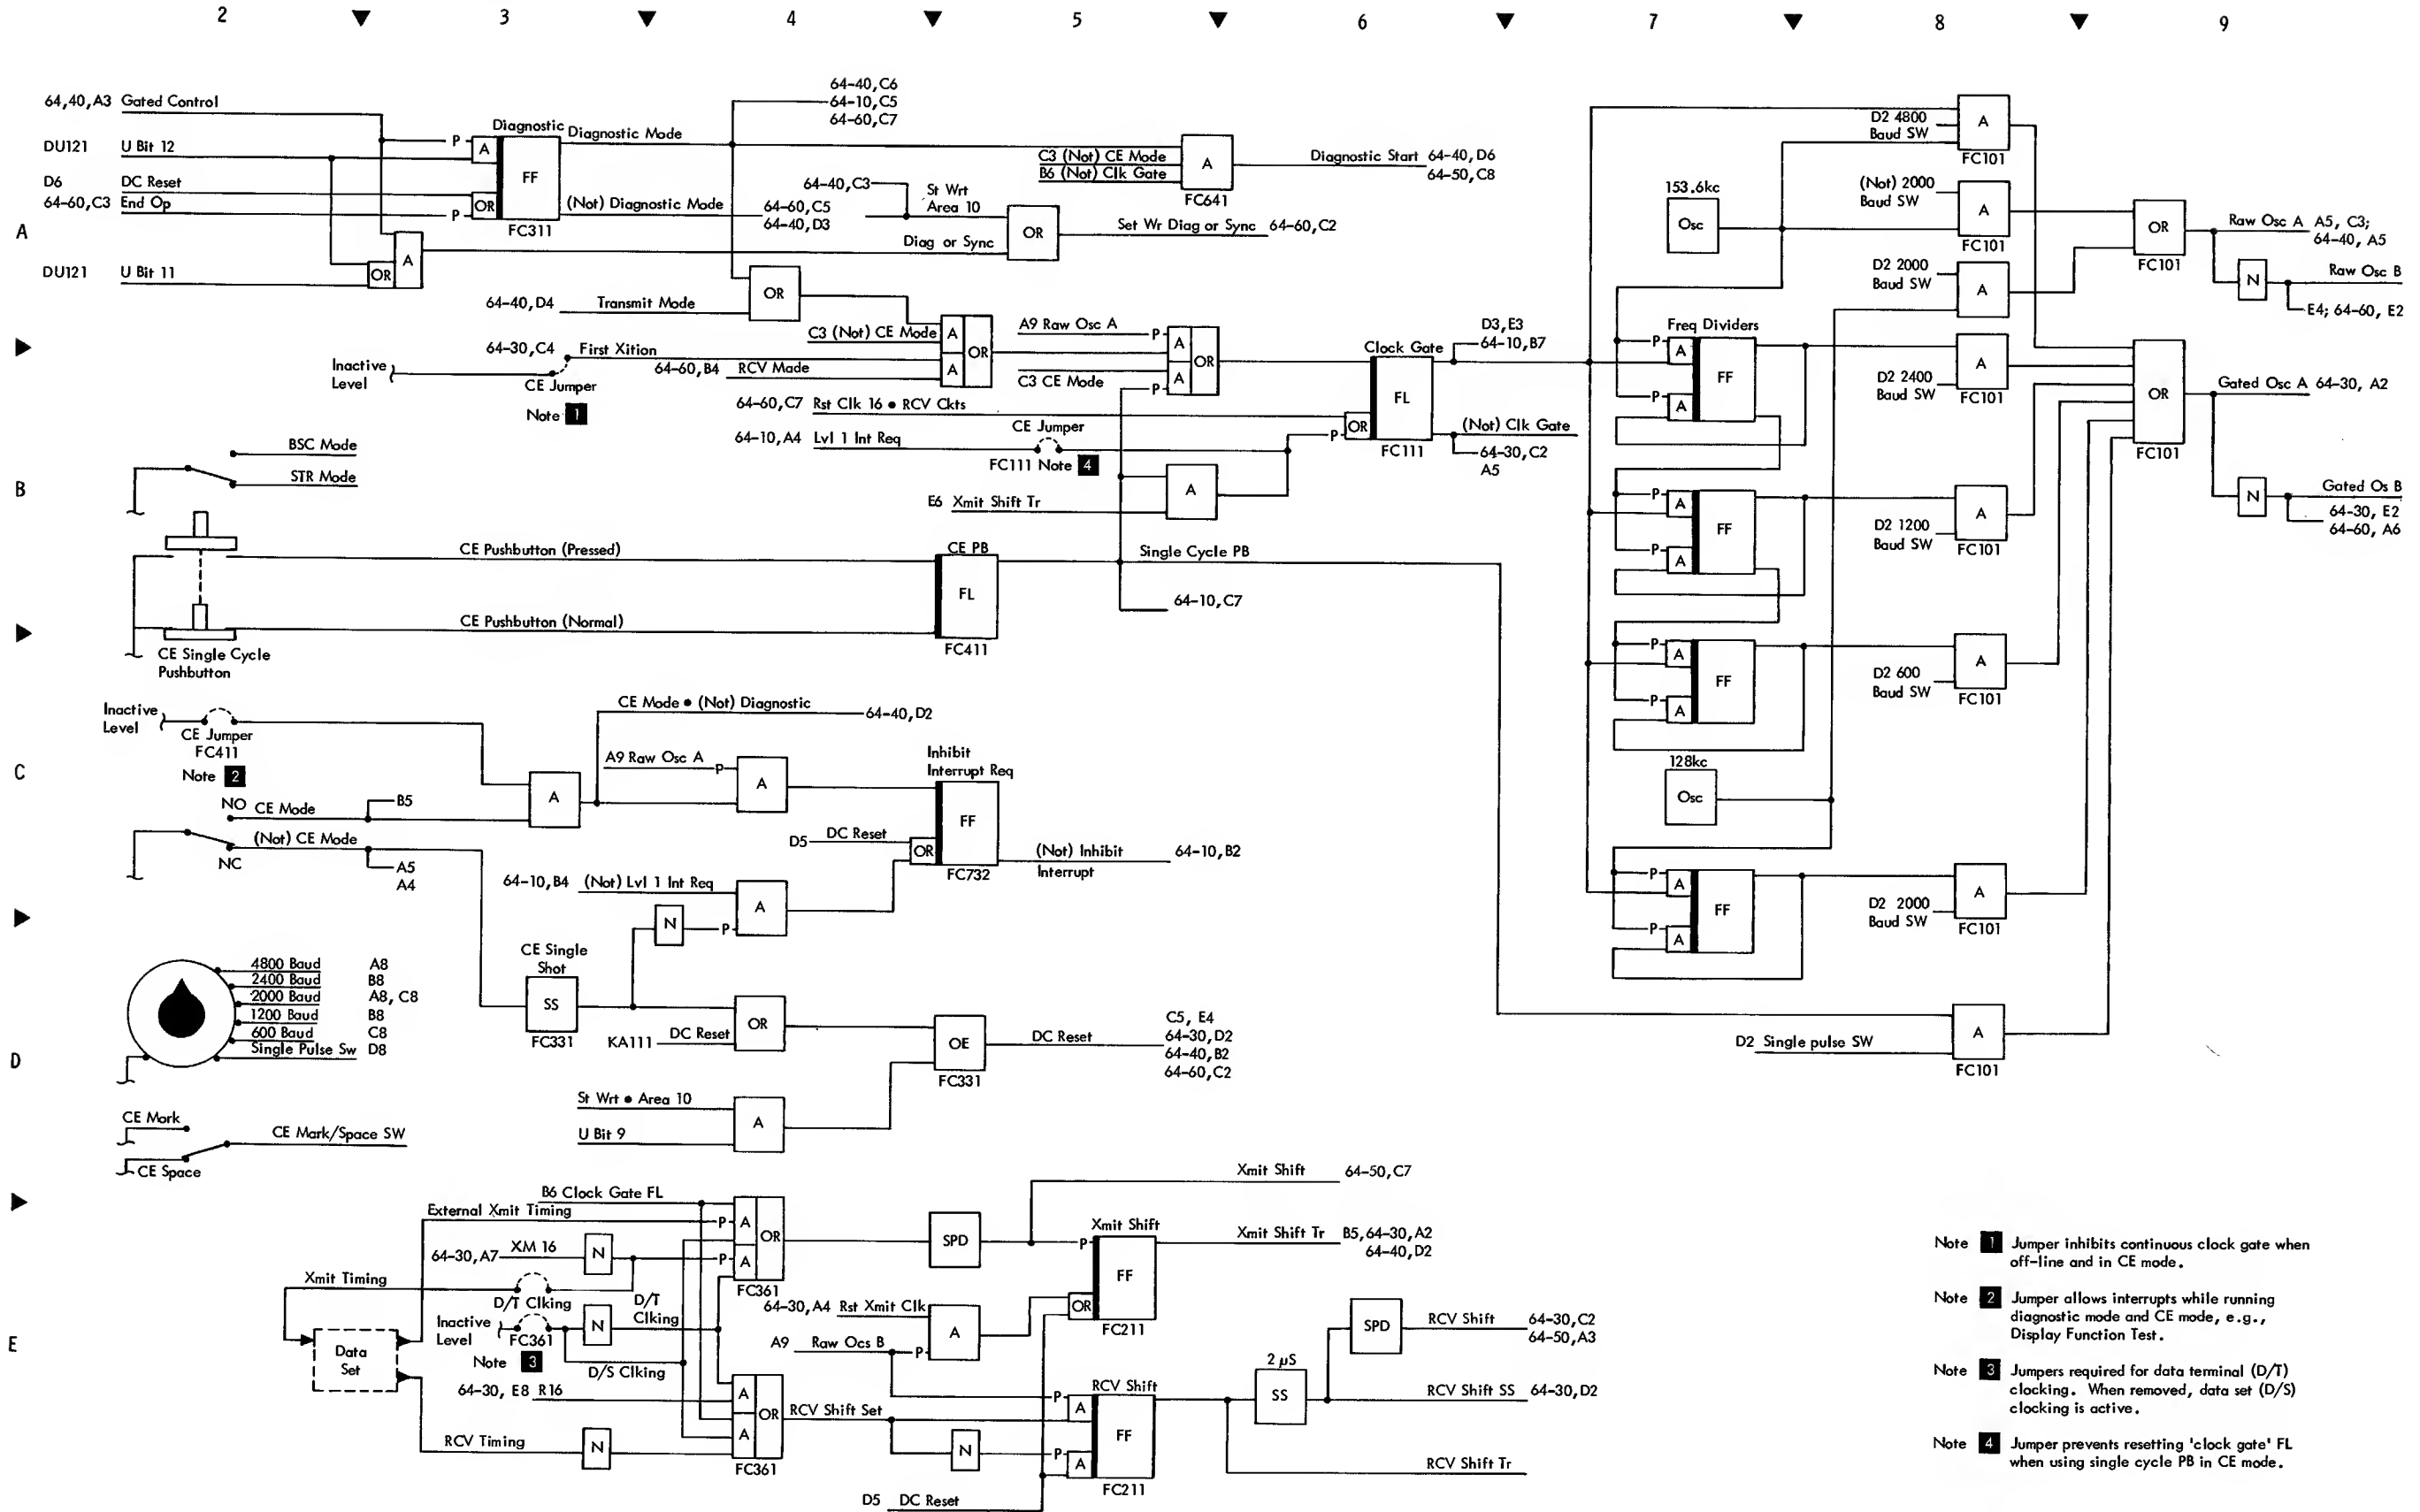


Diagram 63-10. SCA Data Flow and Control

Diagram 64-20. Clock Controls, CE Mode and Switches, and Diagnostic Mode






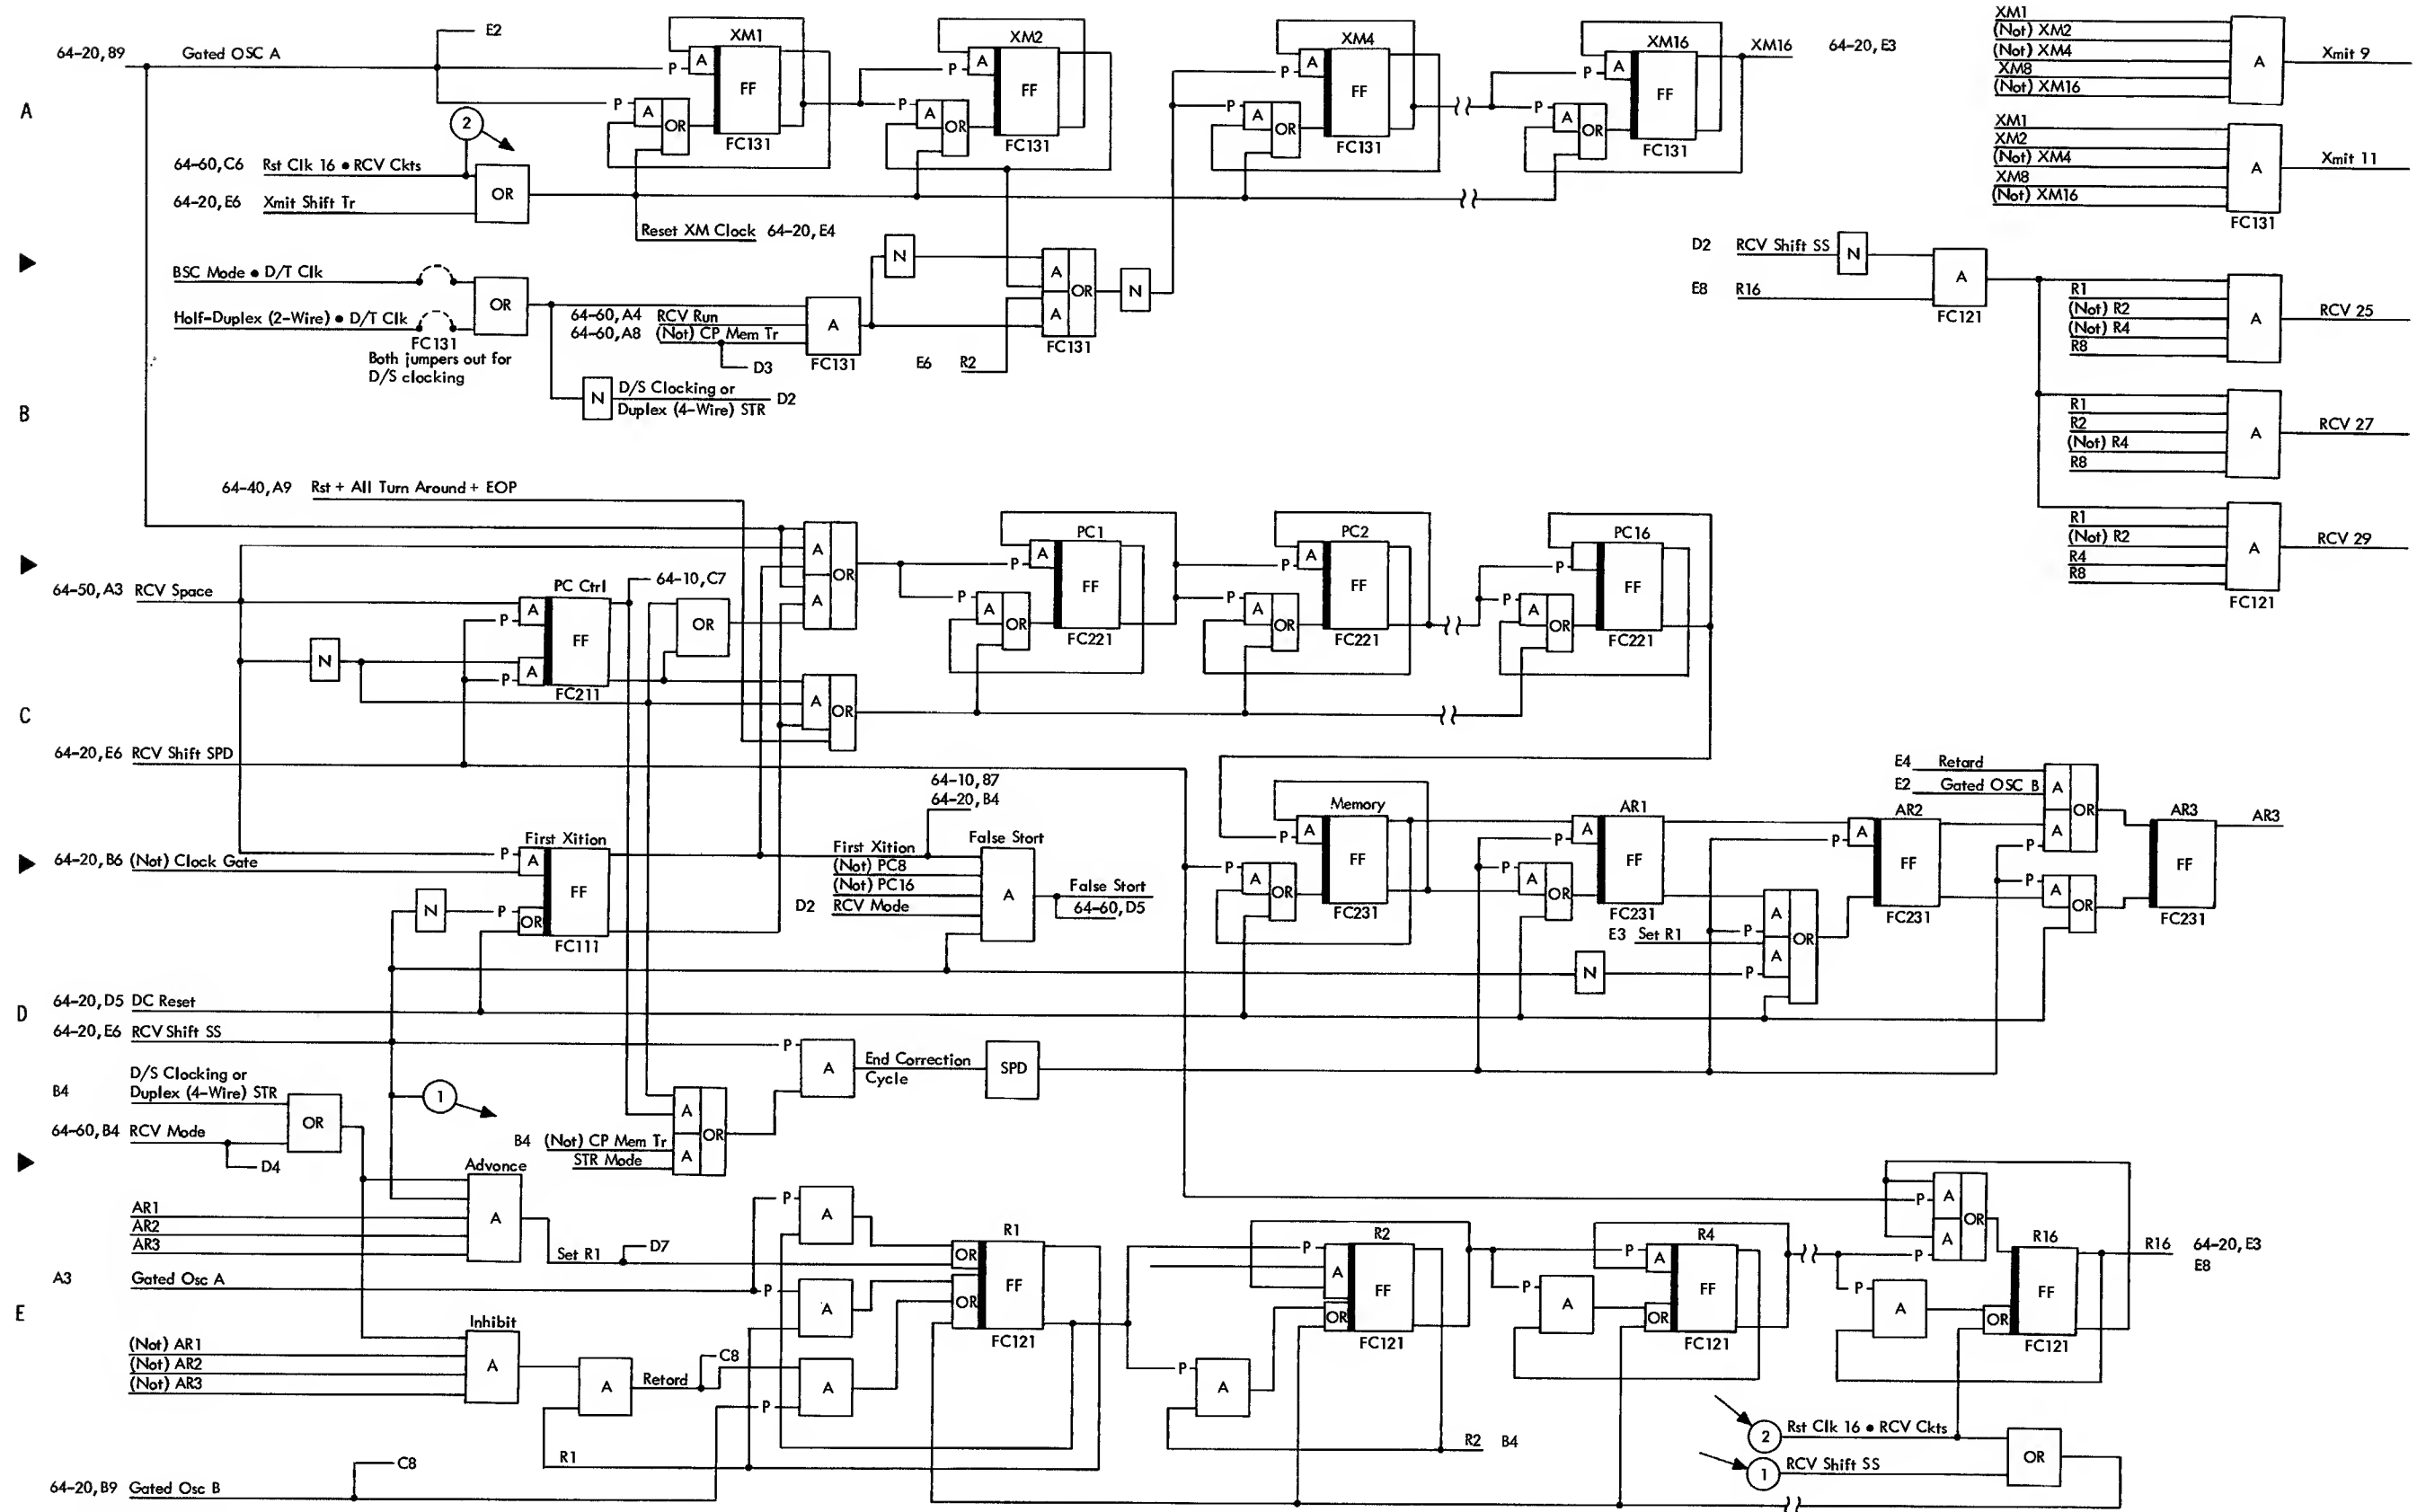


Diagram 64-30. Clocks, Phase Counter, and Advance/Retard

 Diagram 64-40. Synchronize and Start Write

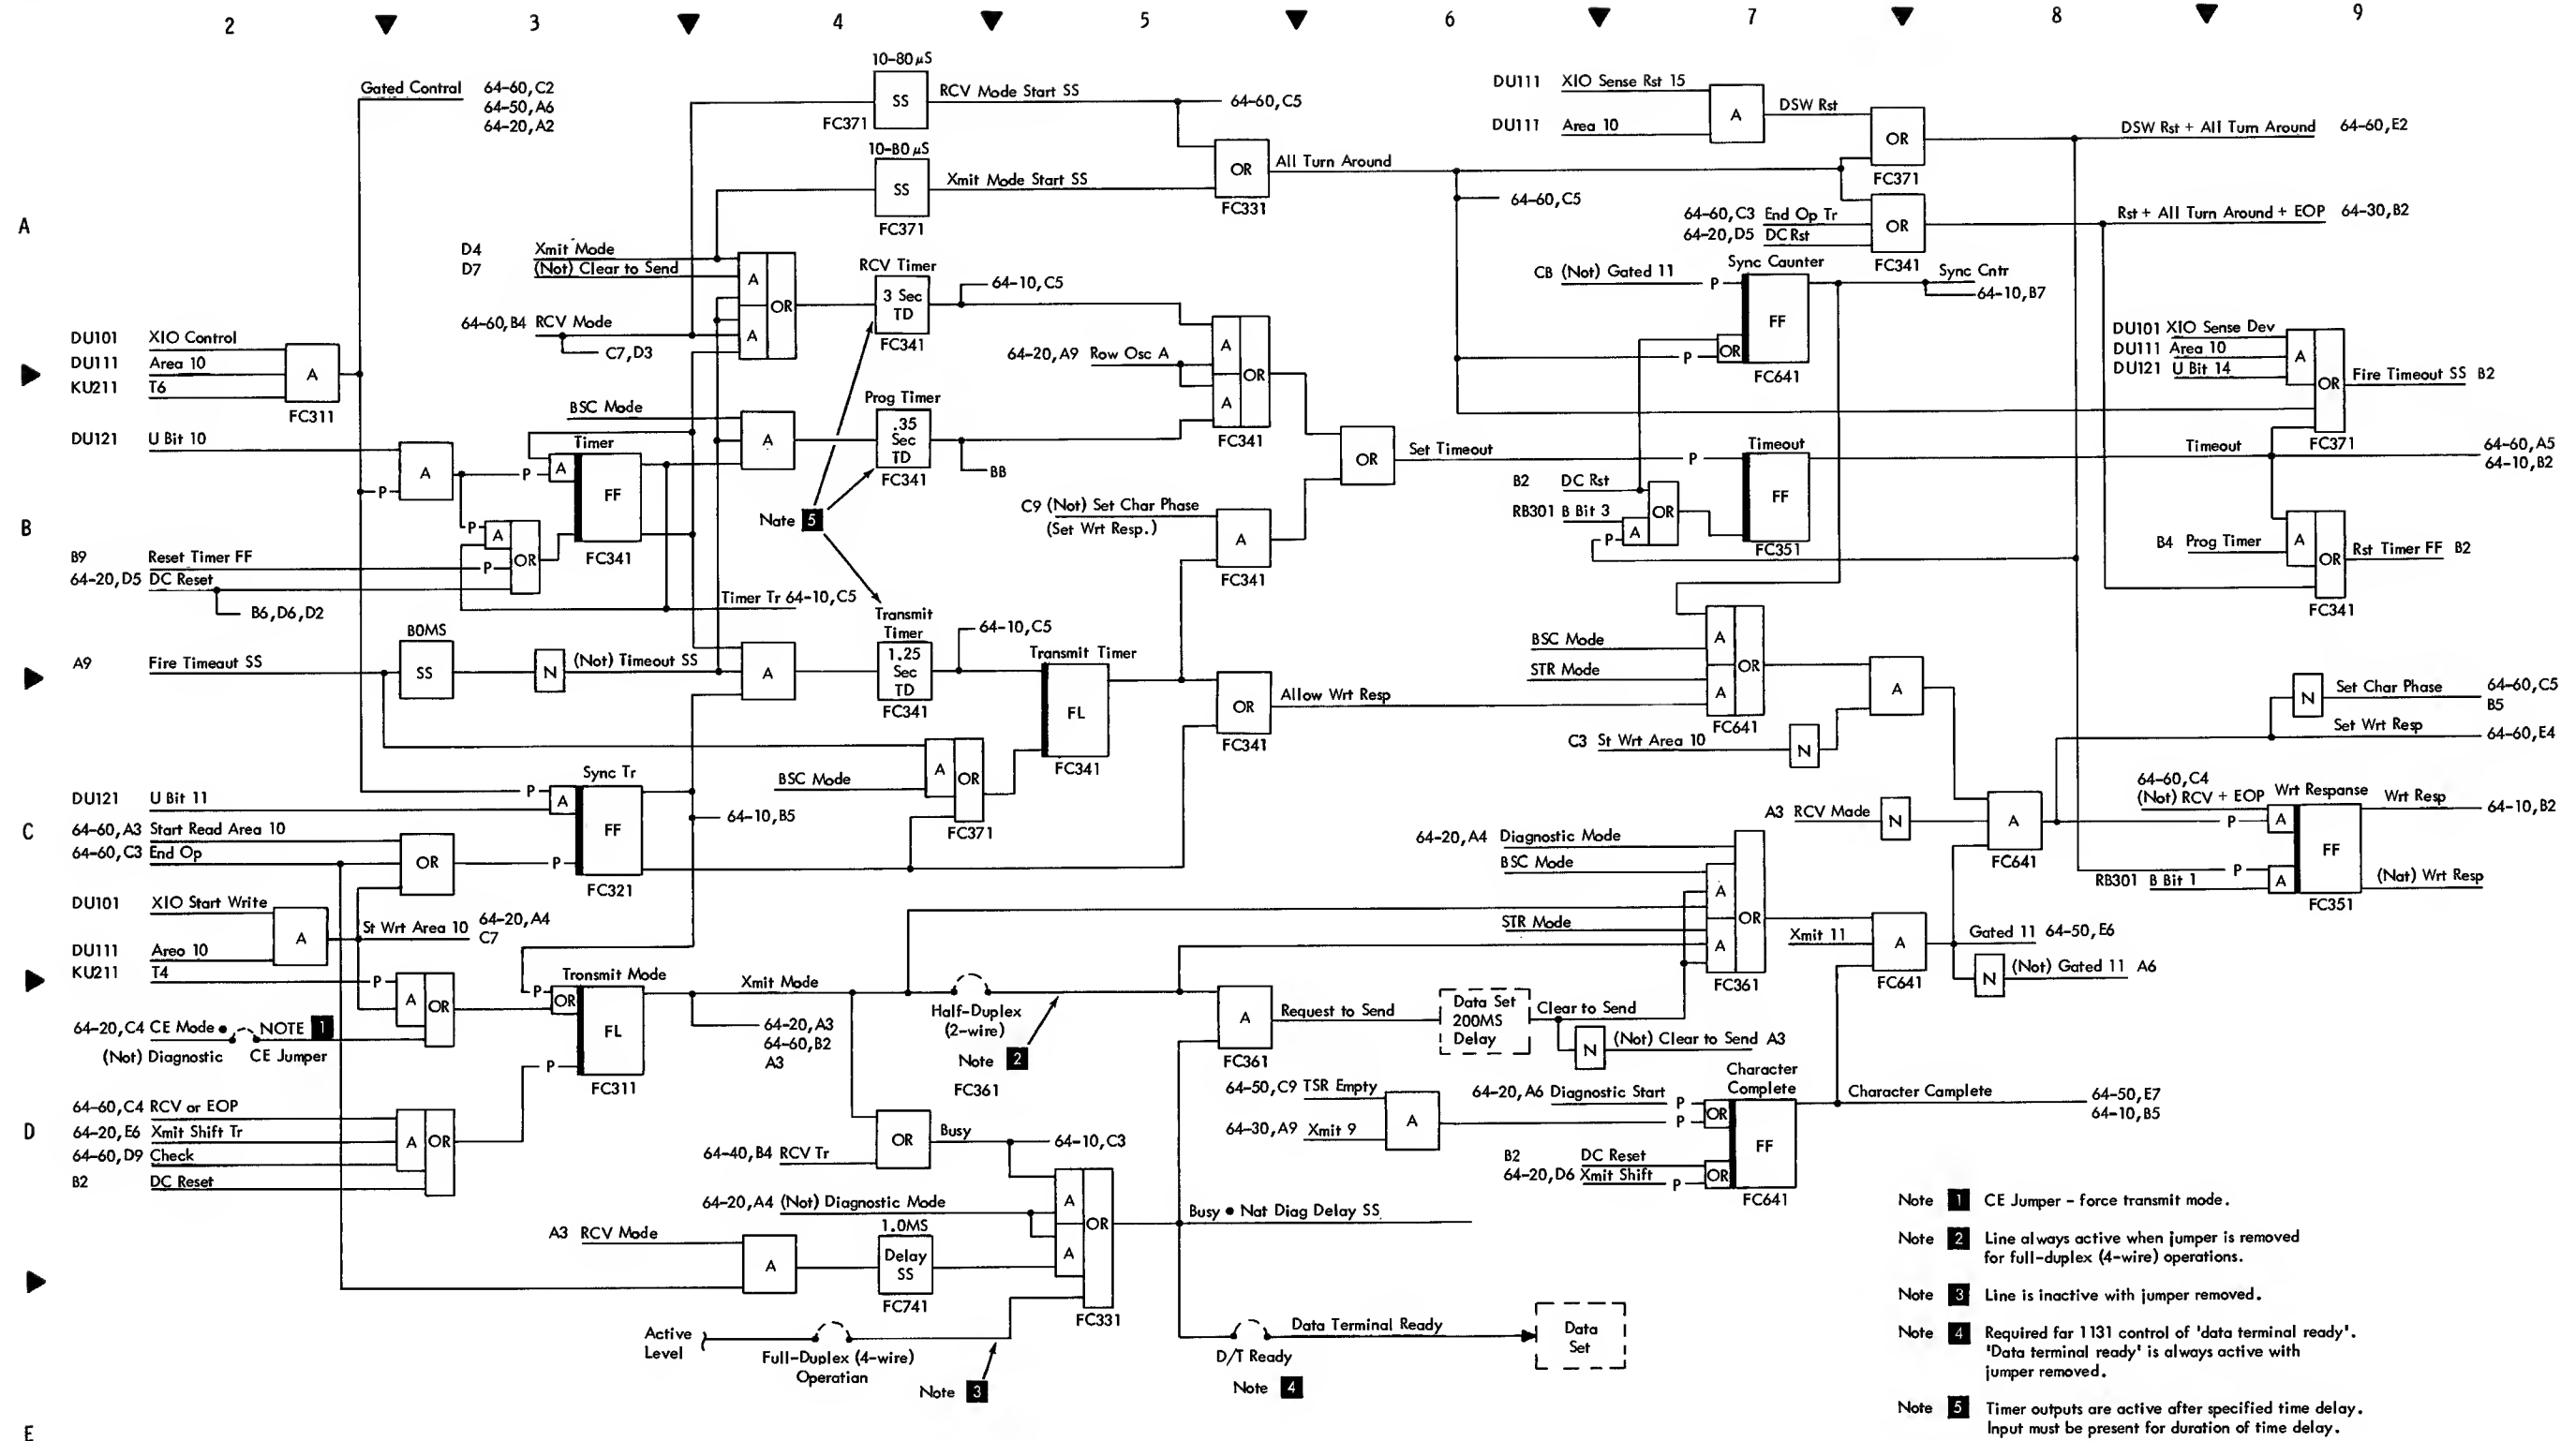


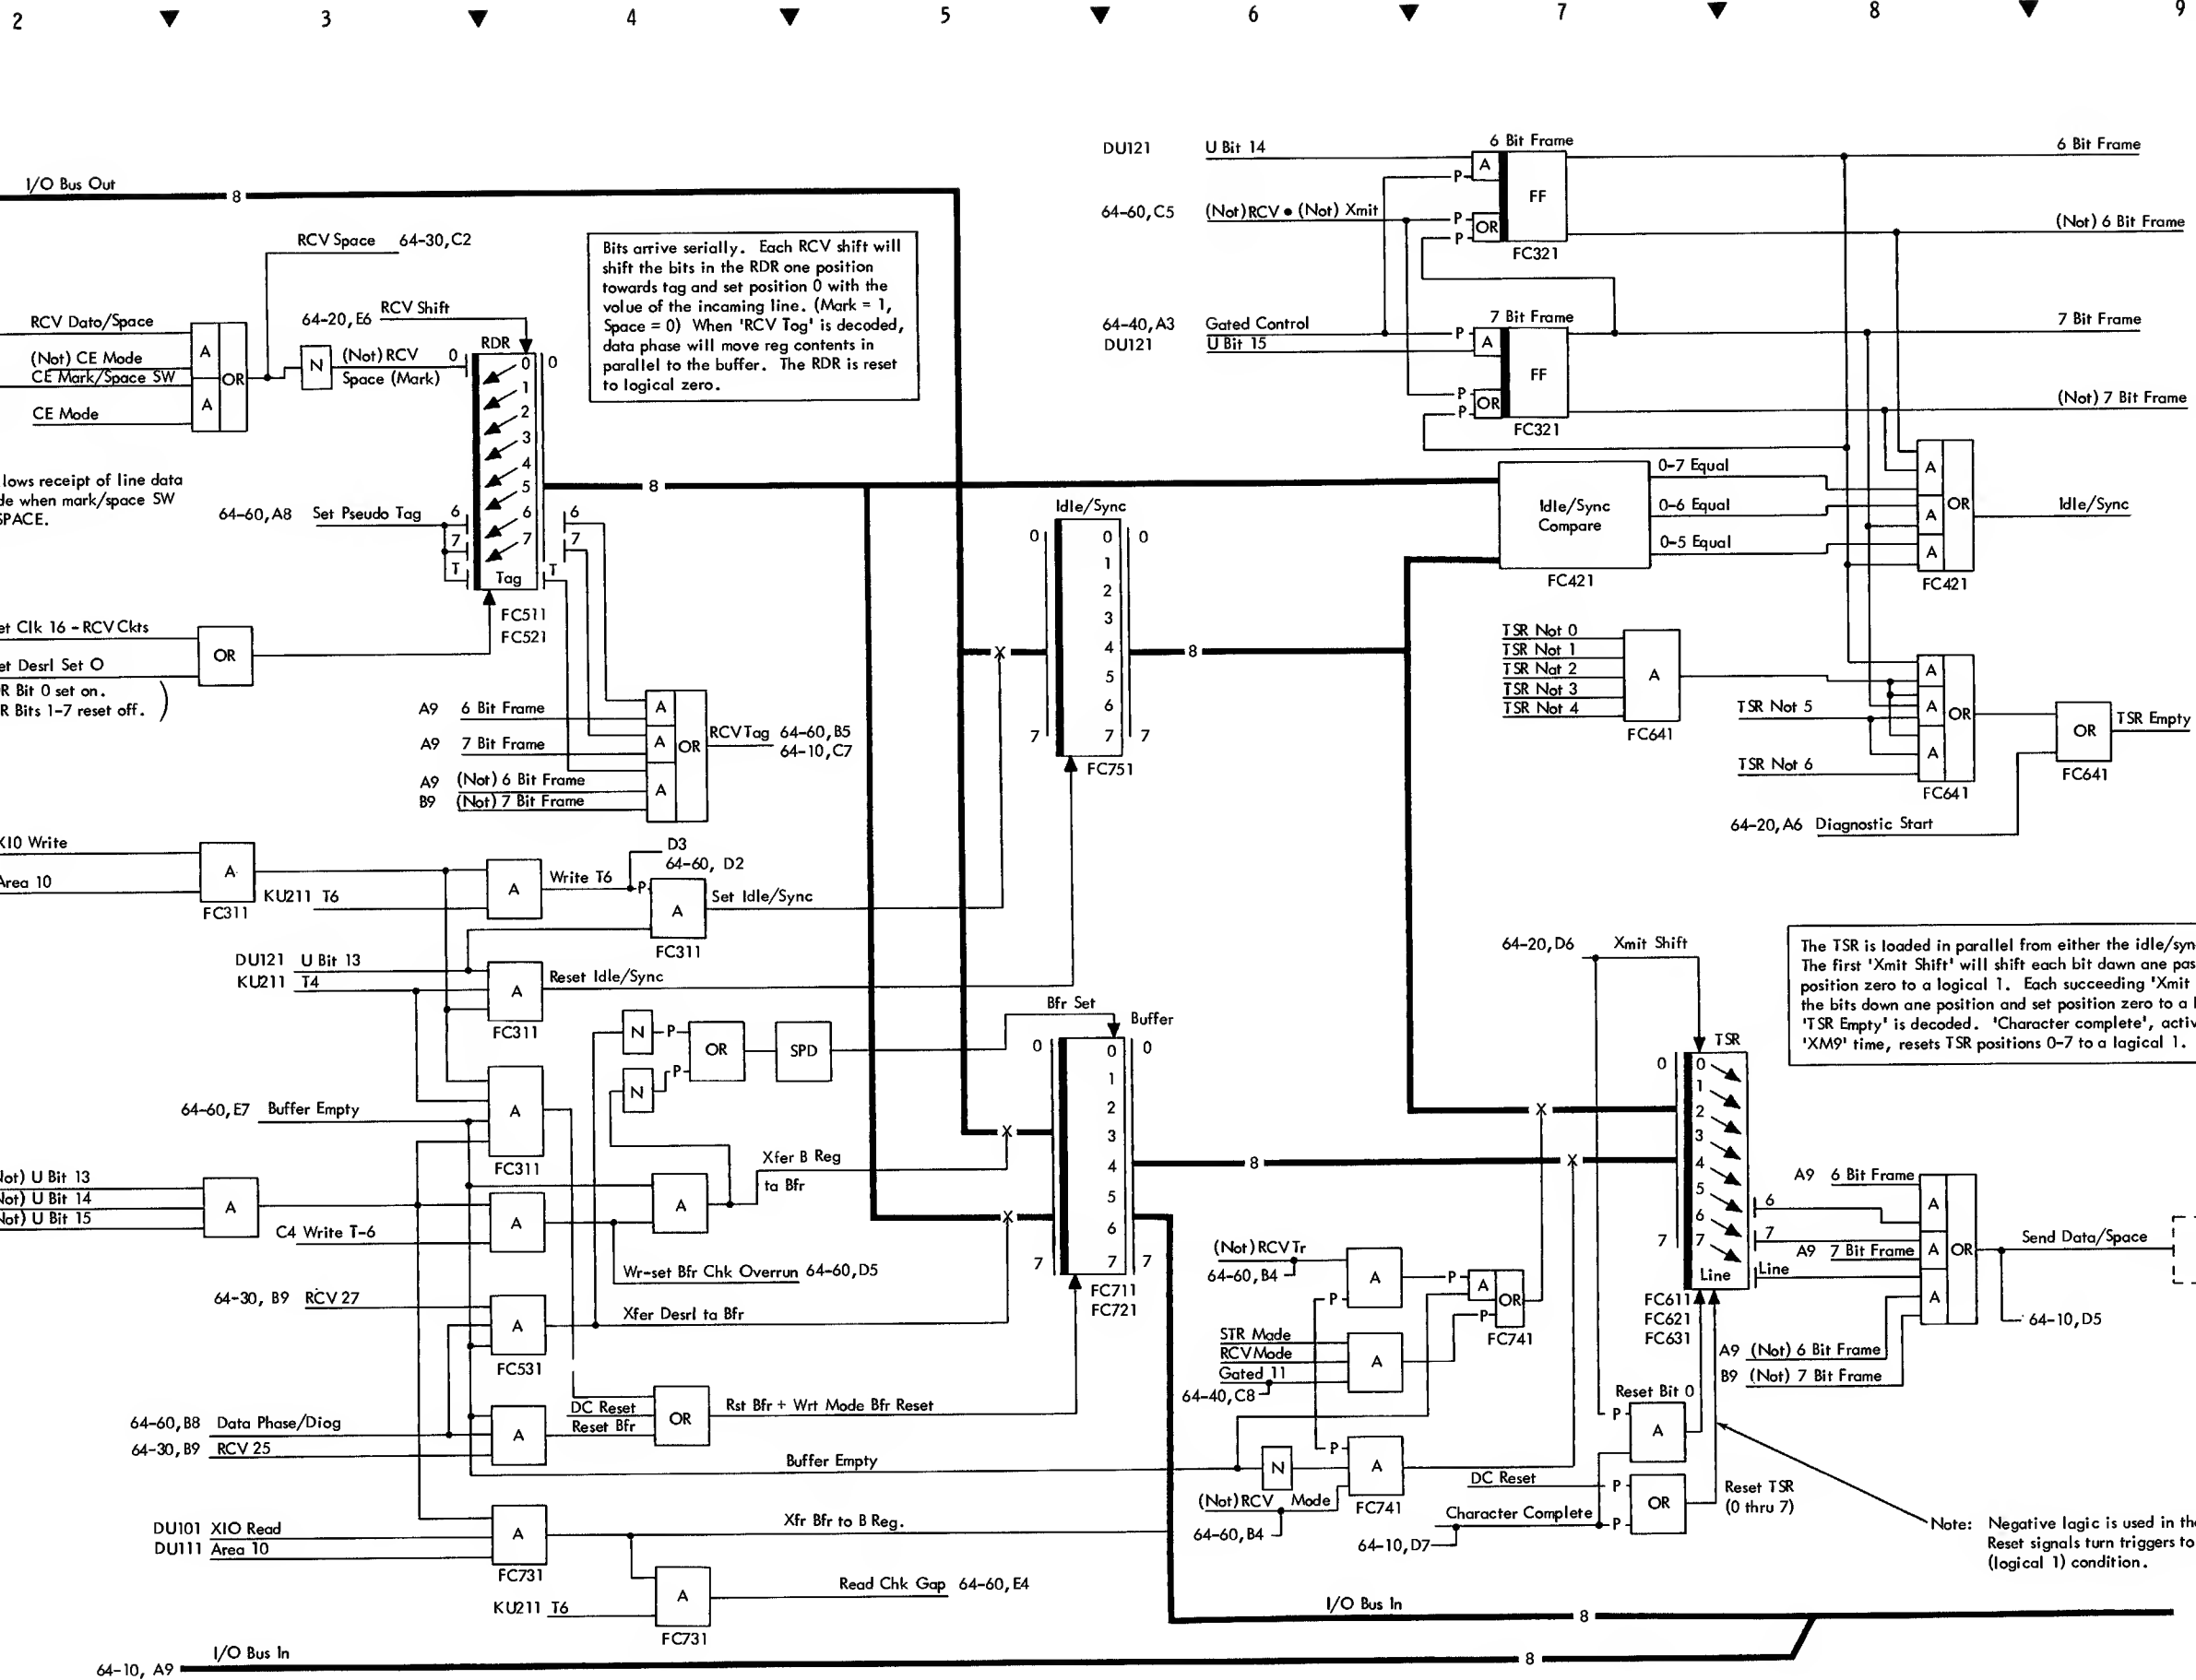



9

Diagram 65-10. Synchronize, Start Write, and Write (Objectives and Operation)

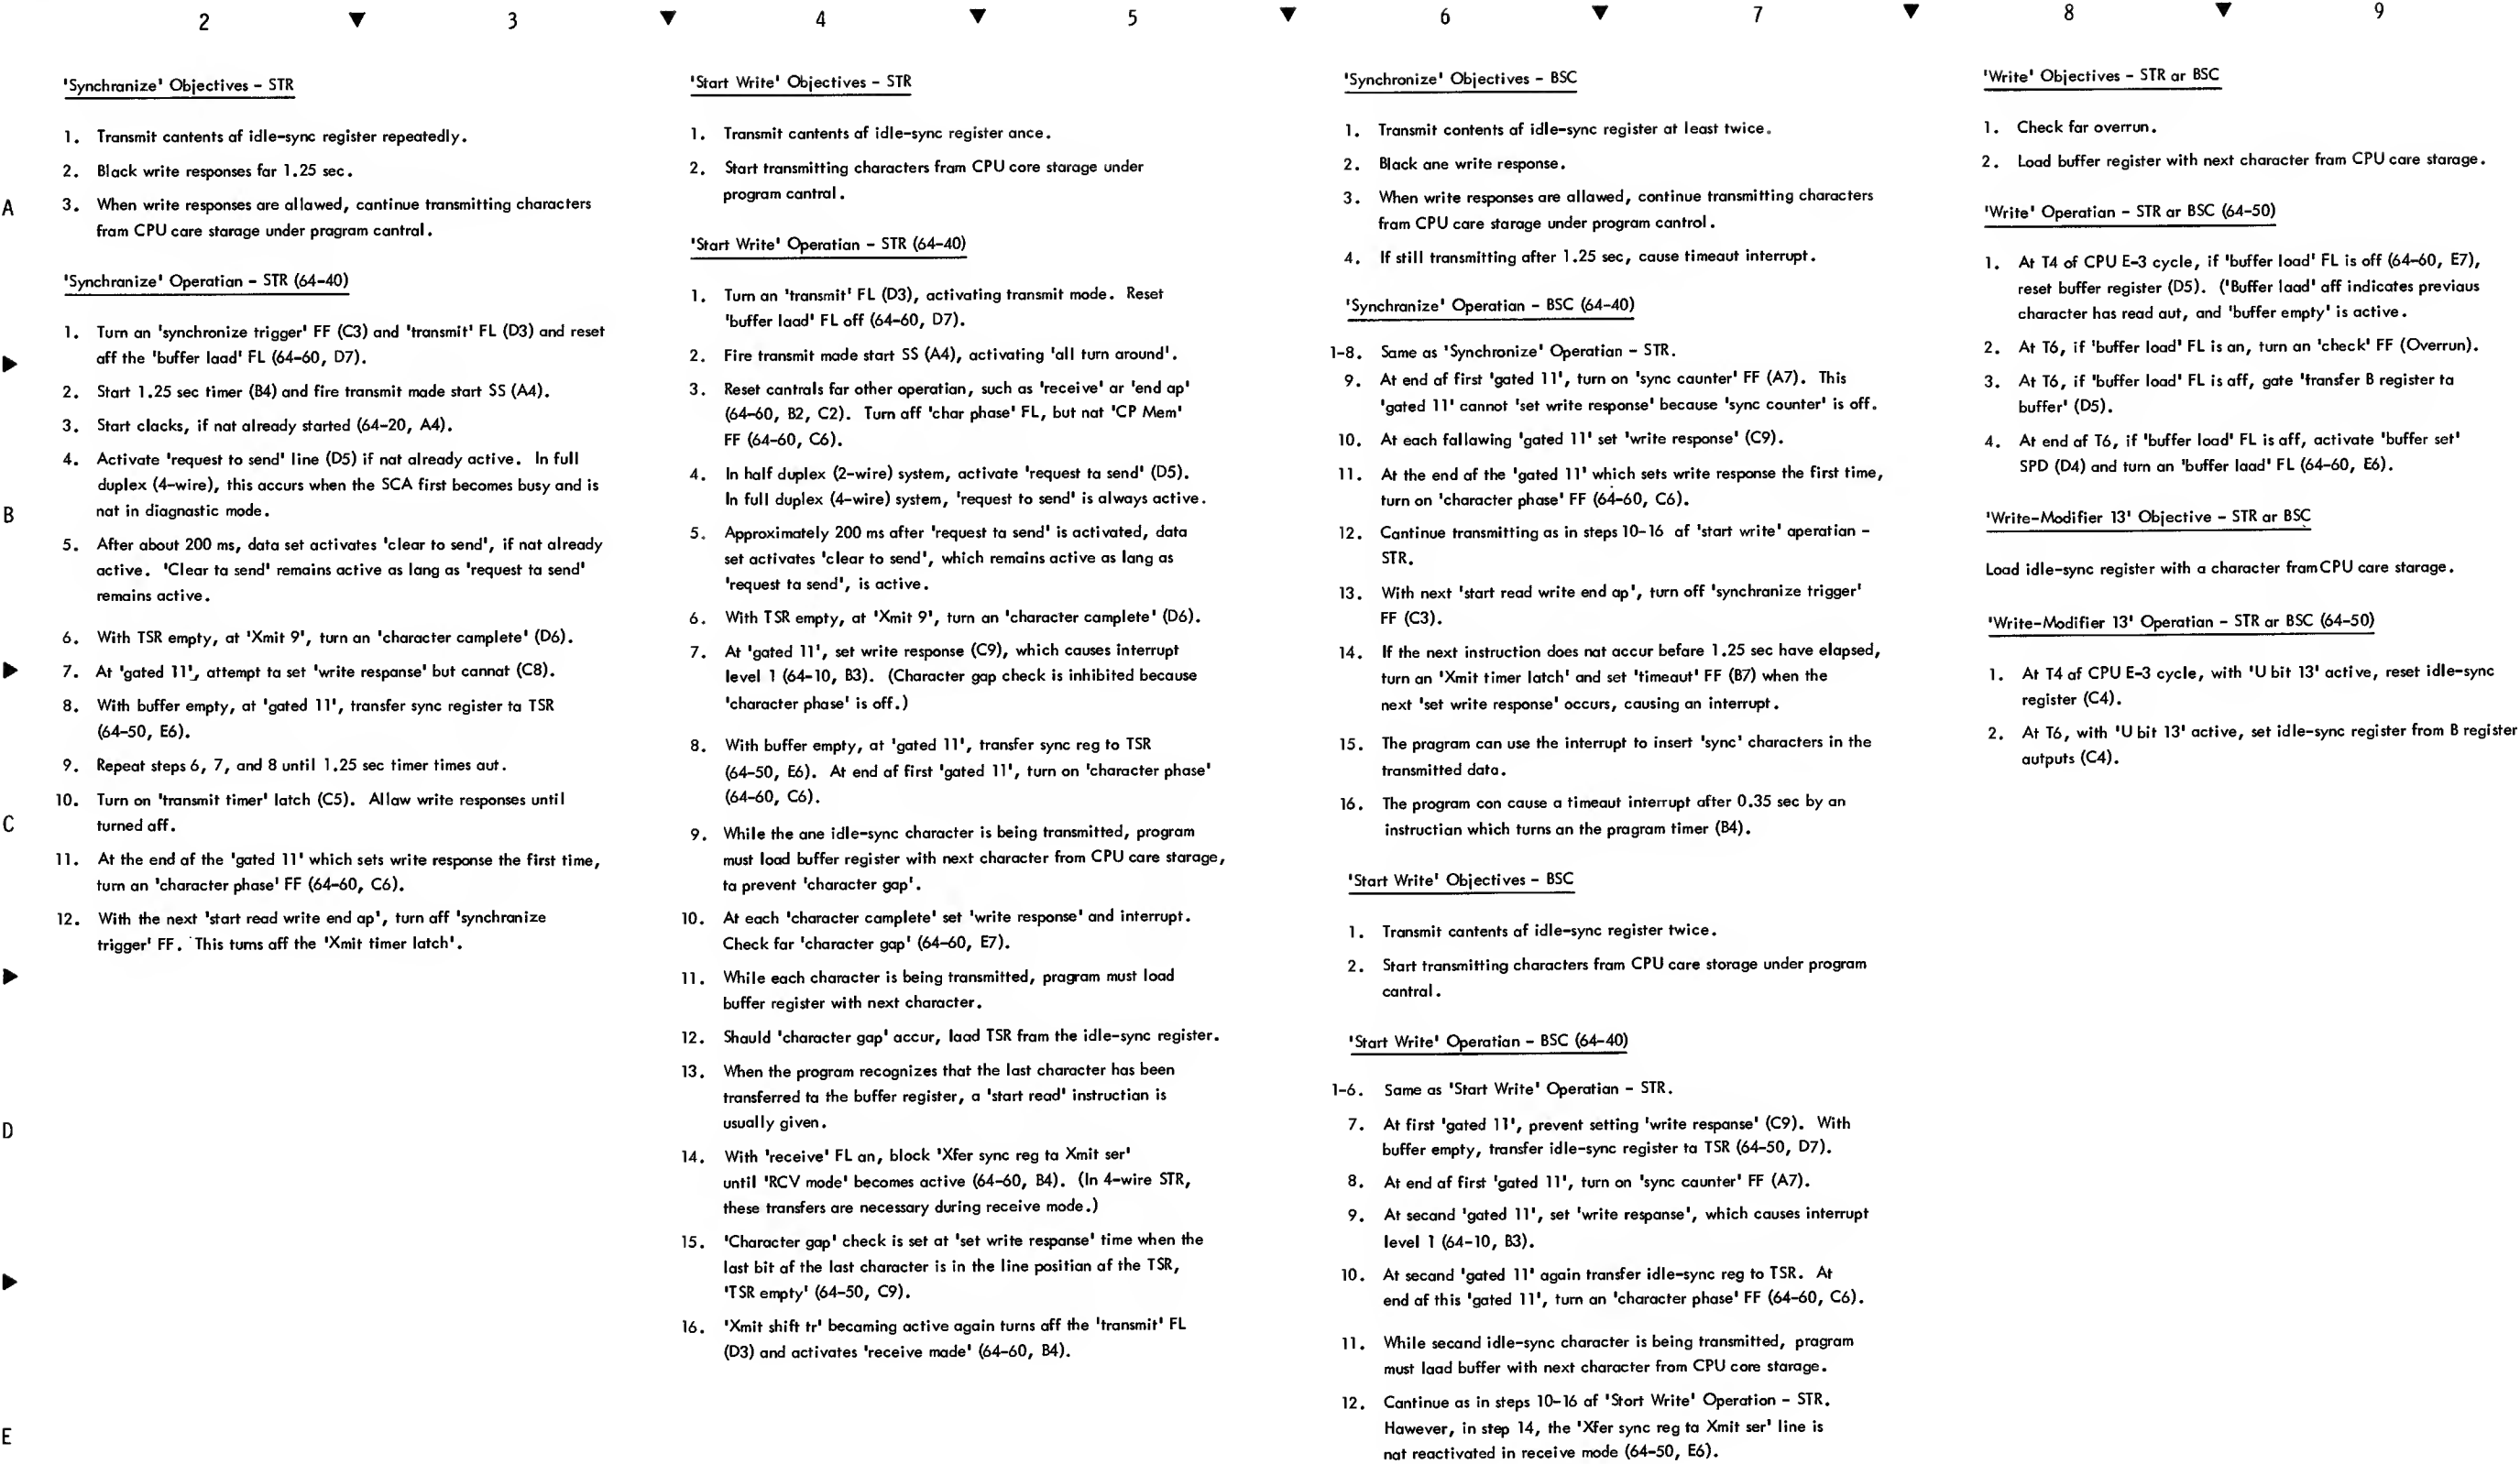

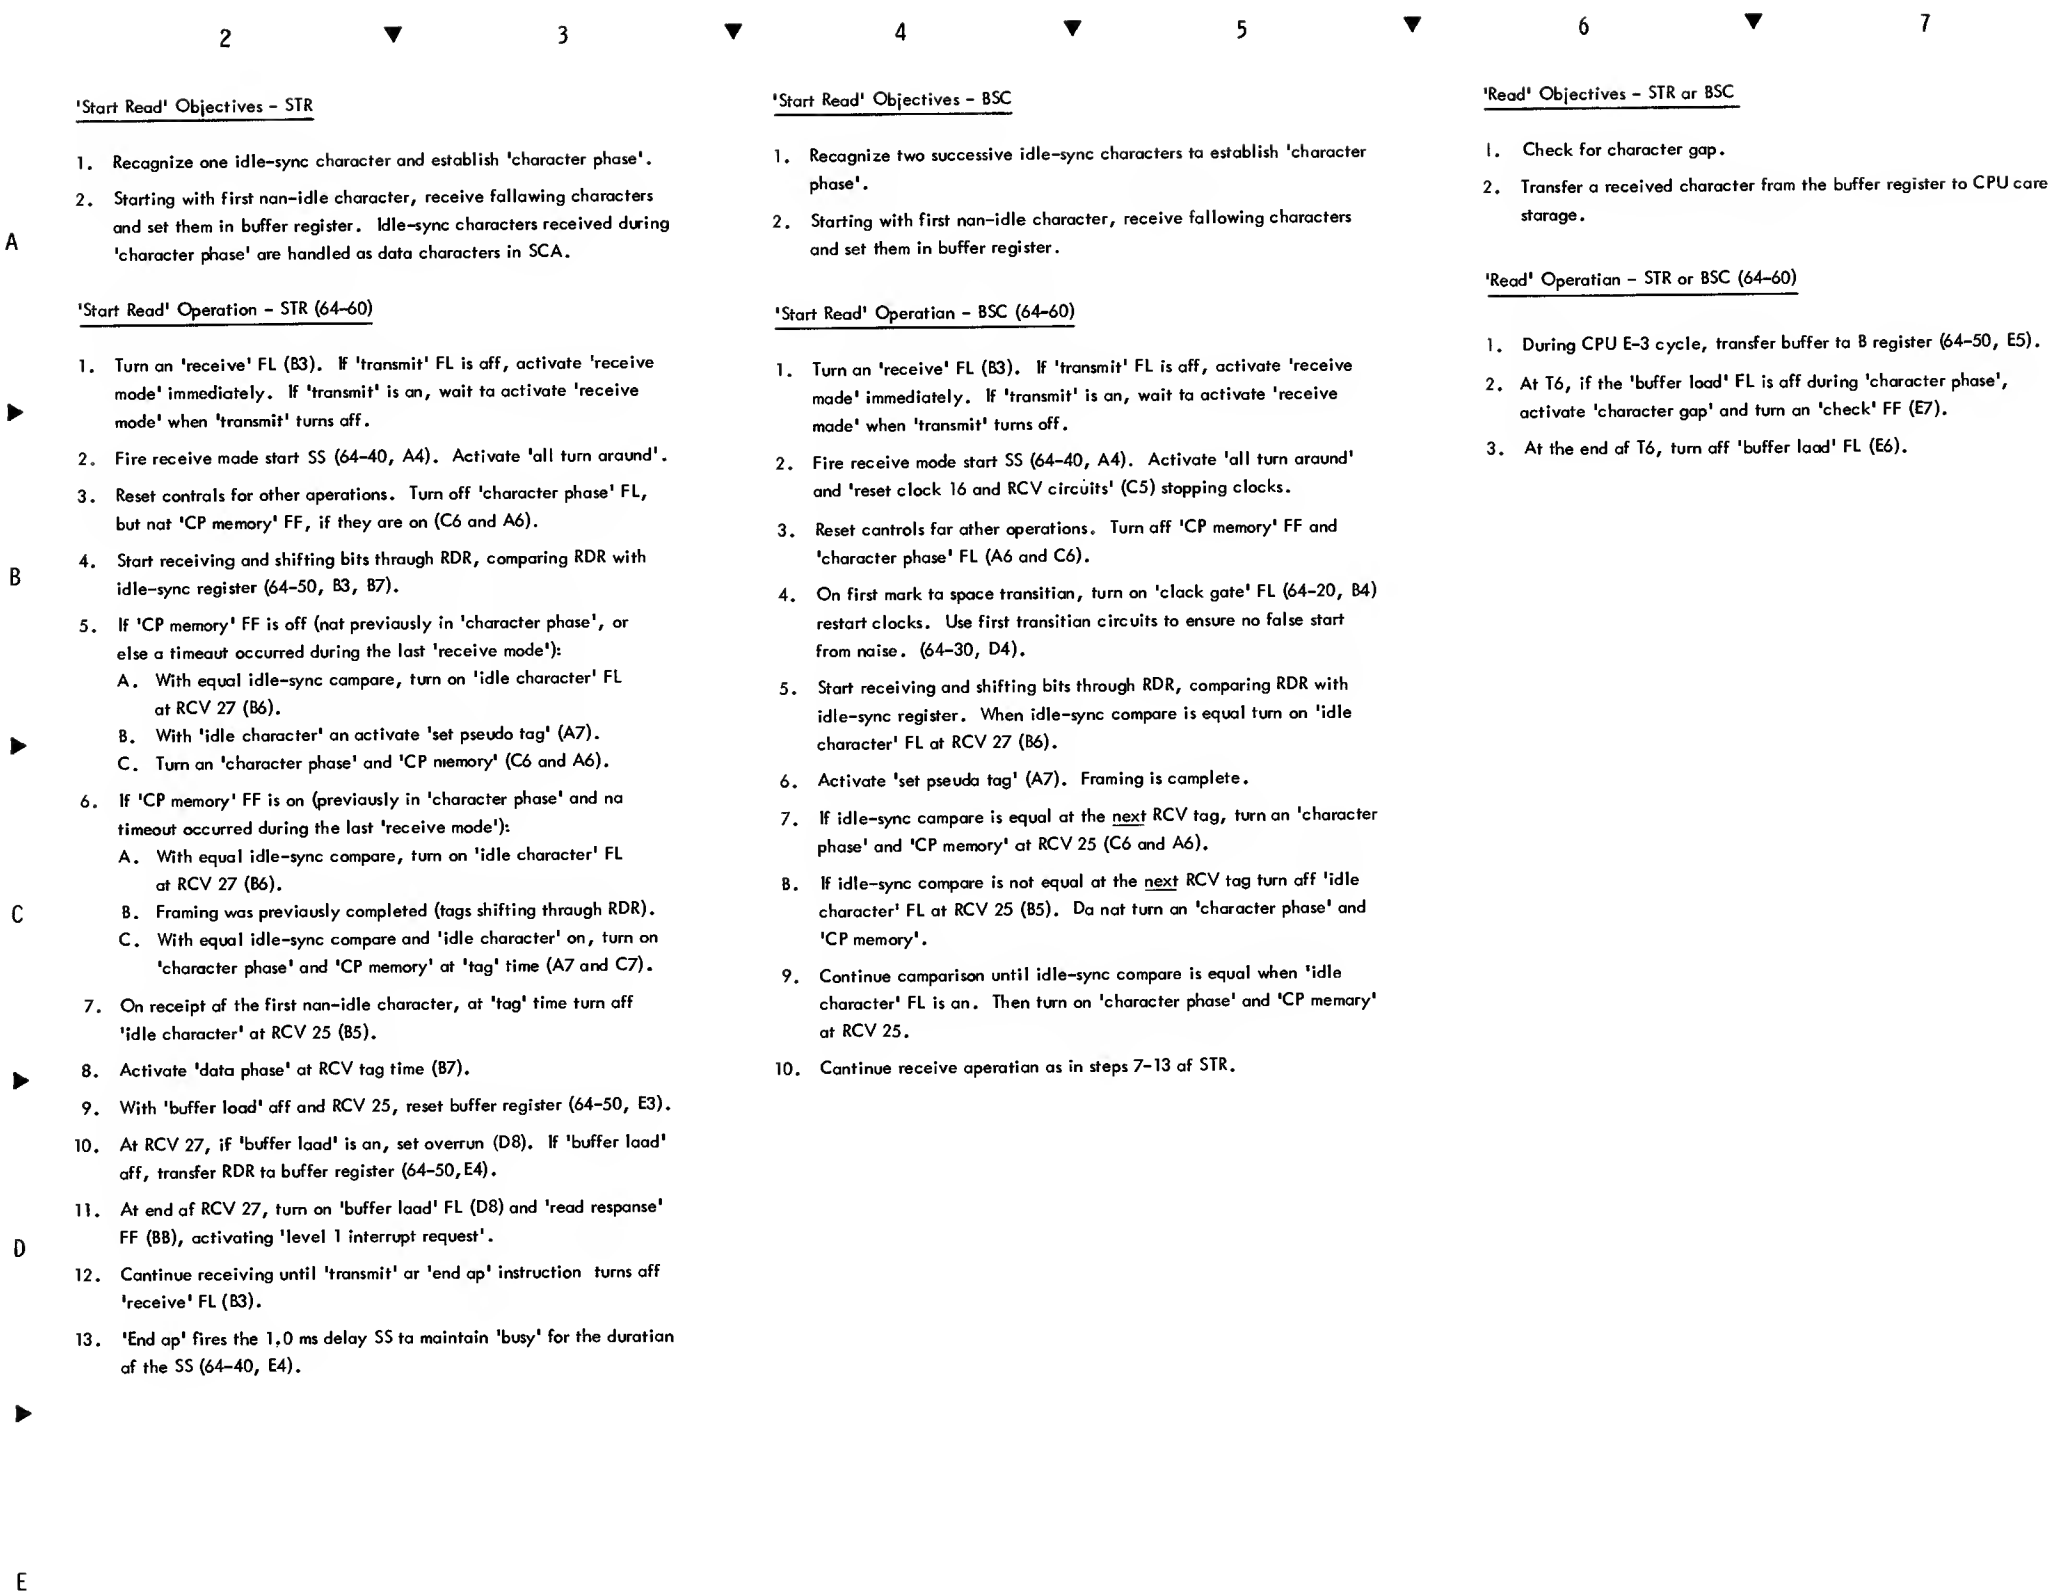


Diagram 65-20. Start Read and Read (Objectives and Operation)

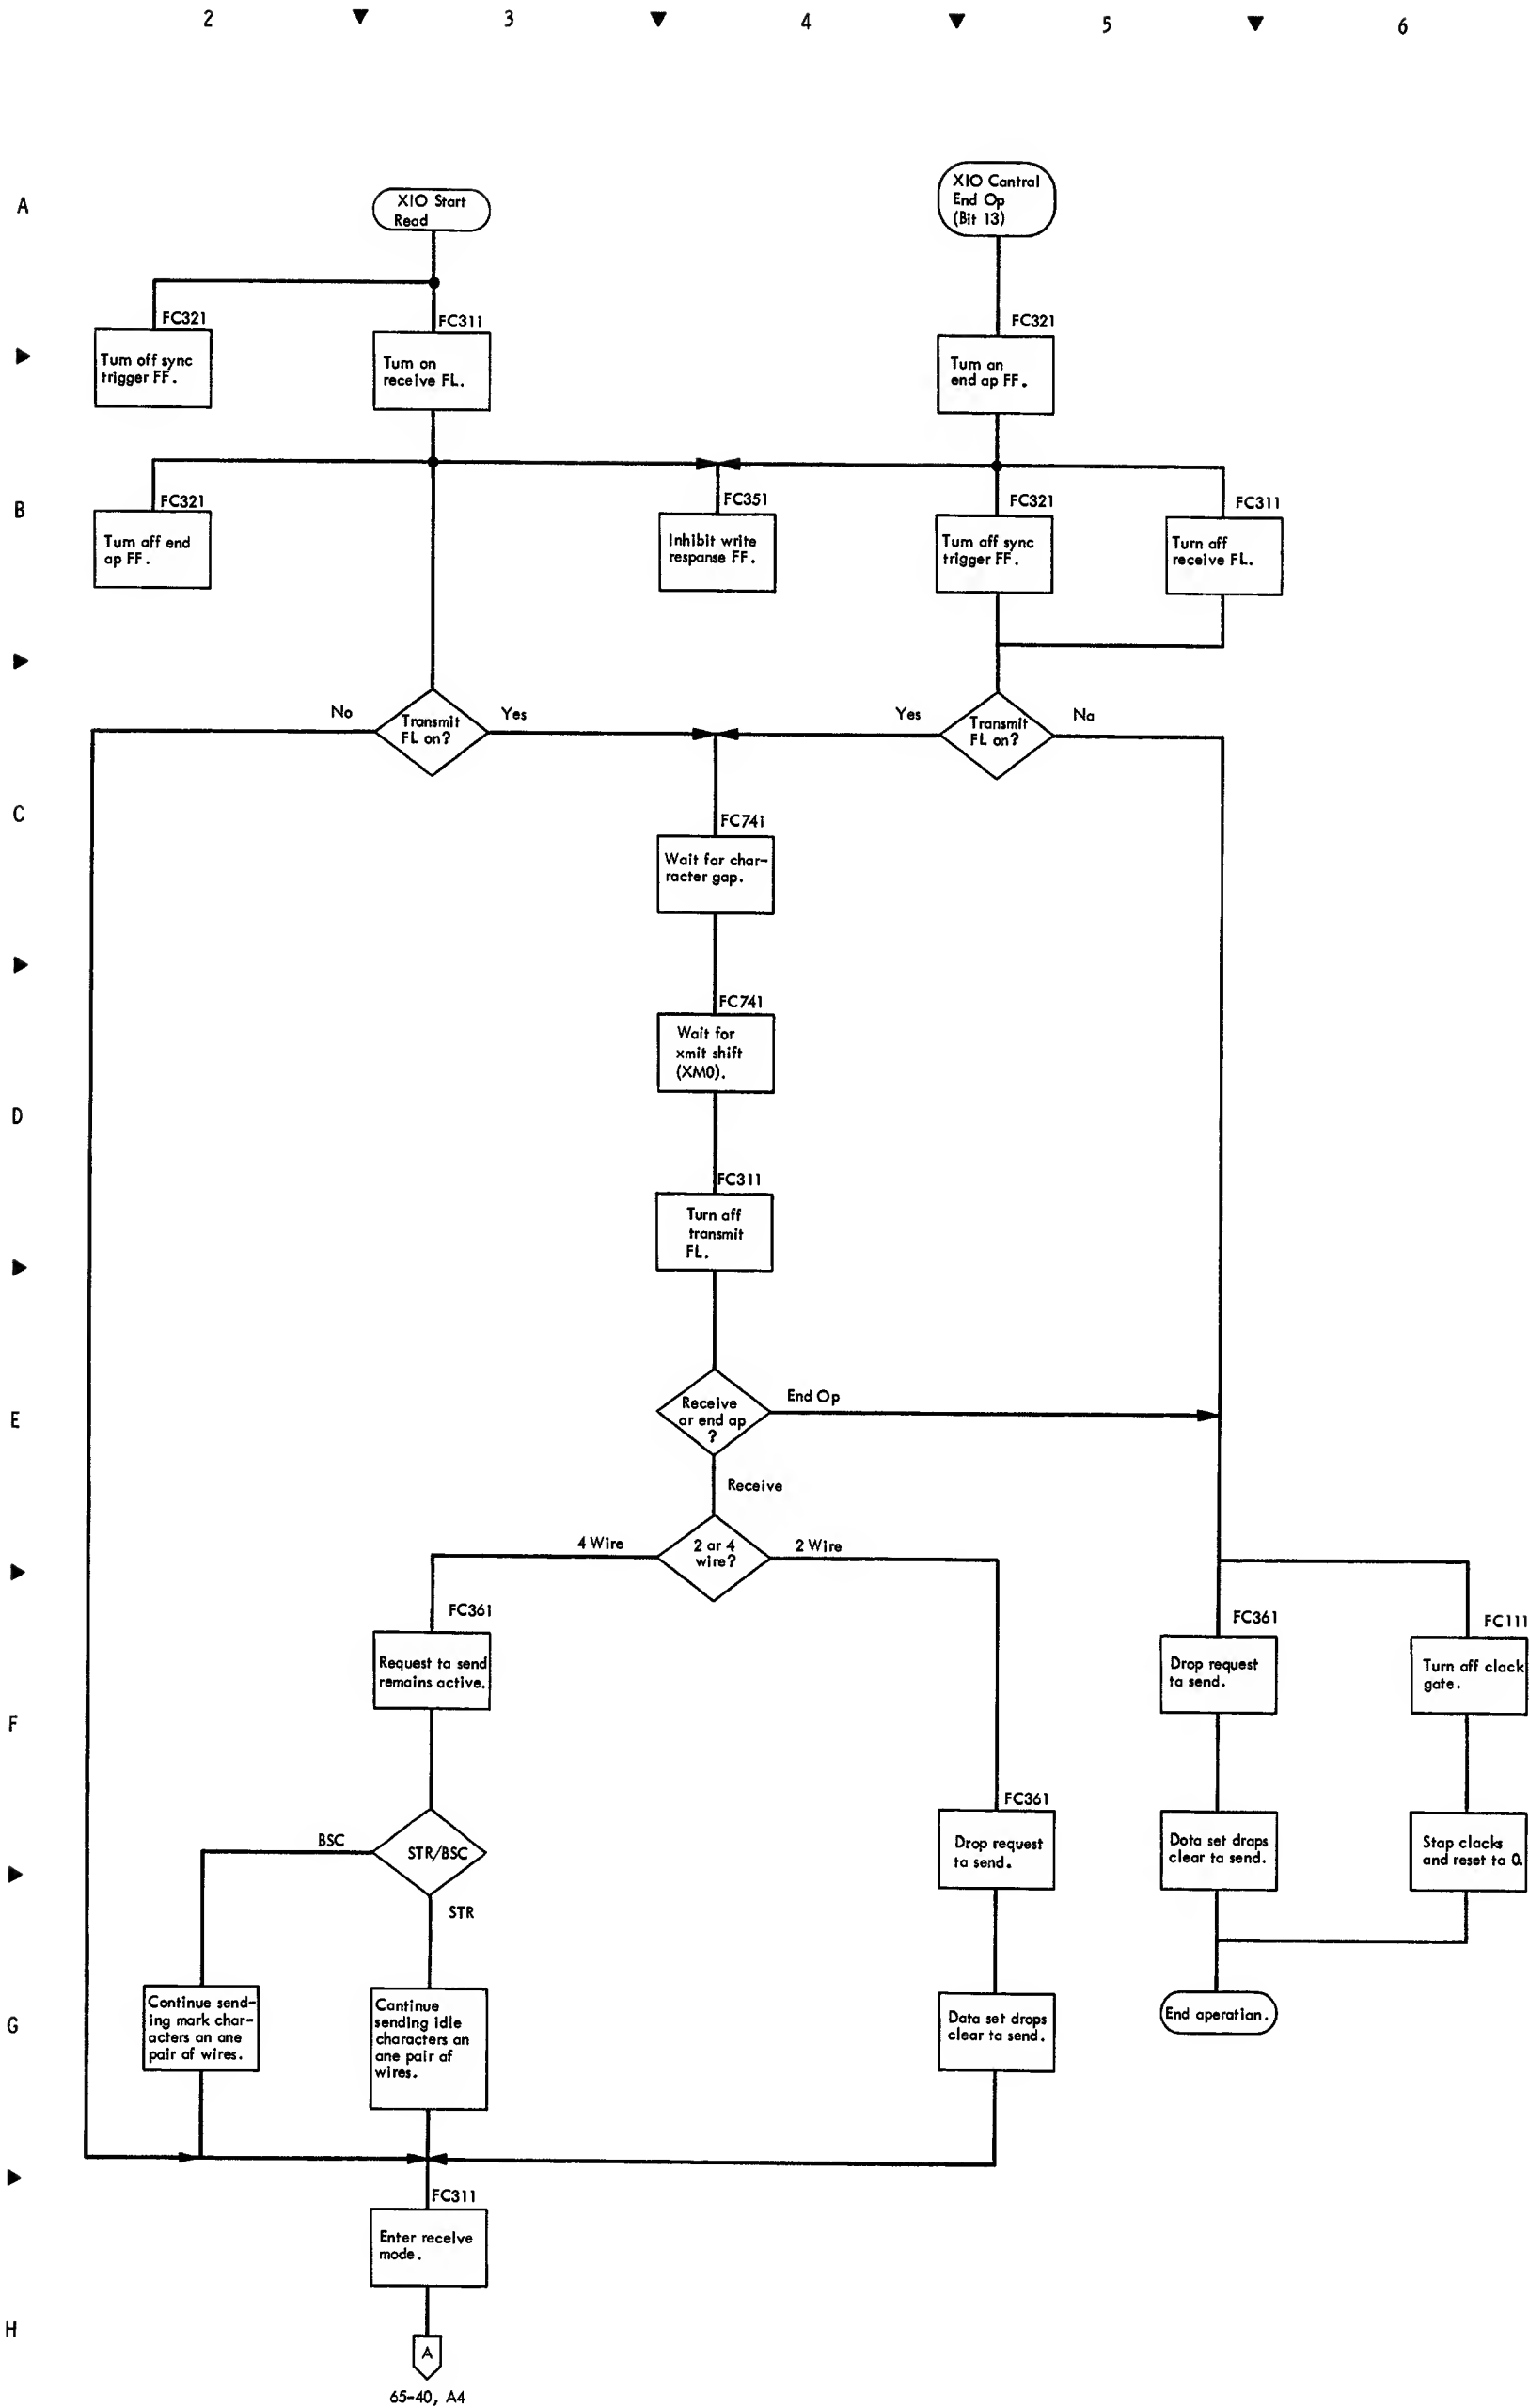


Diagram 65-30. Start Read (Part 1) and End Operation

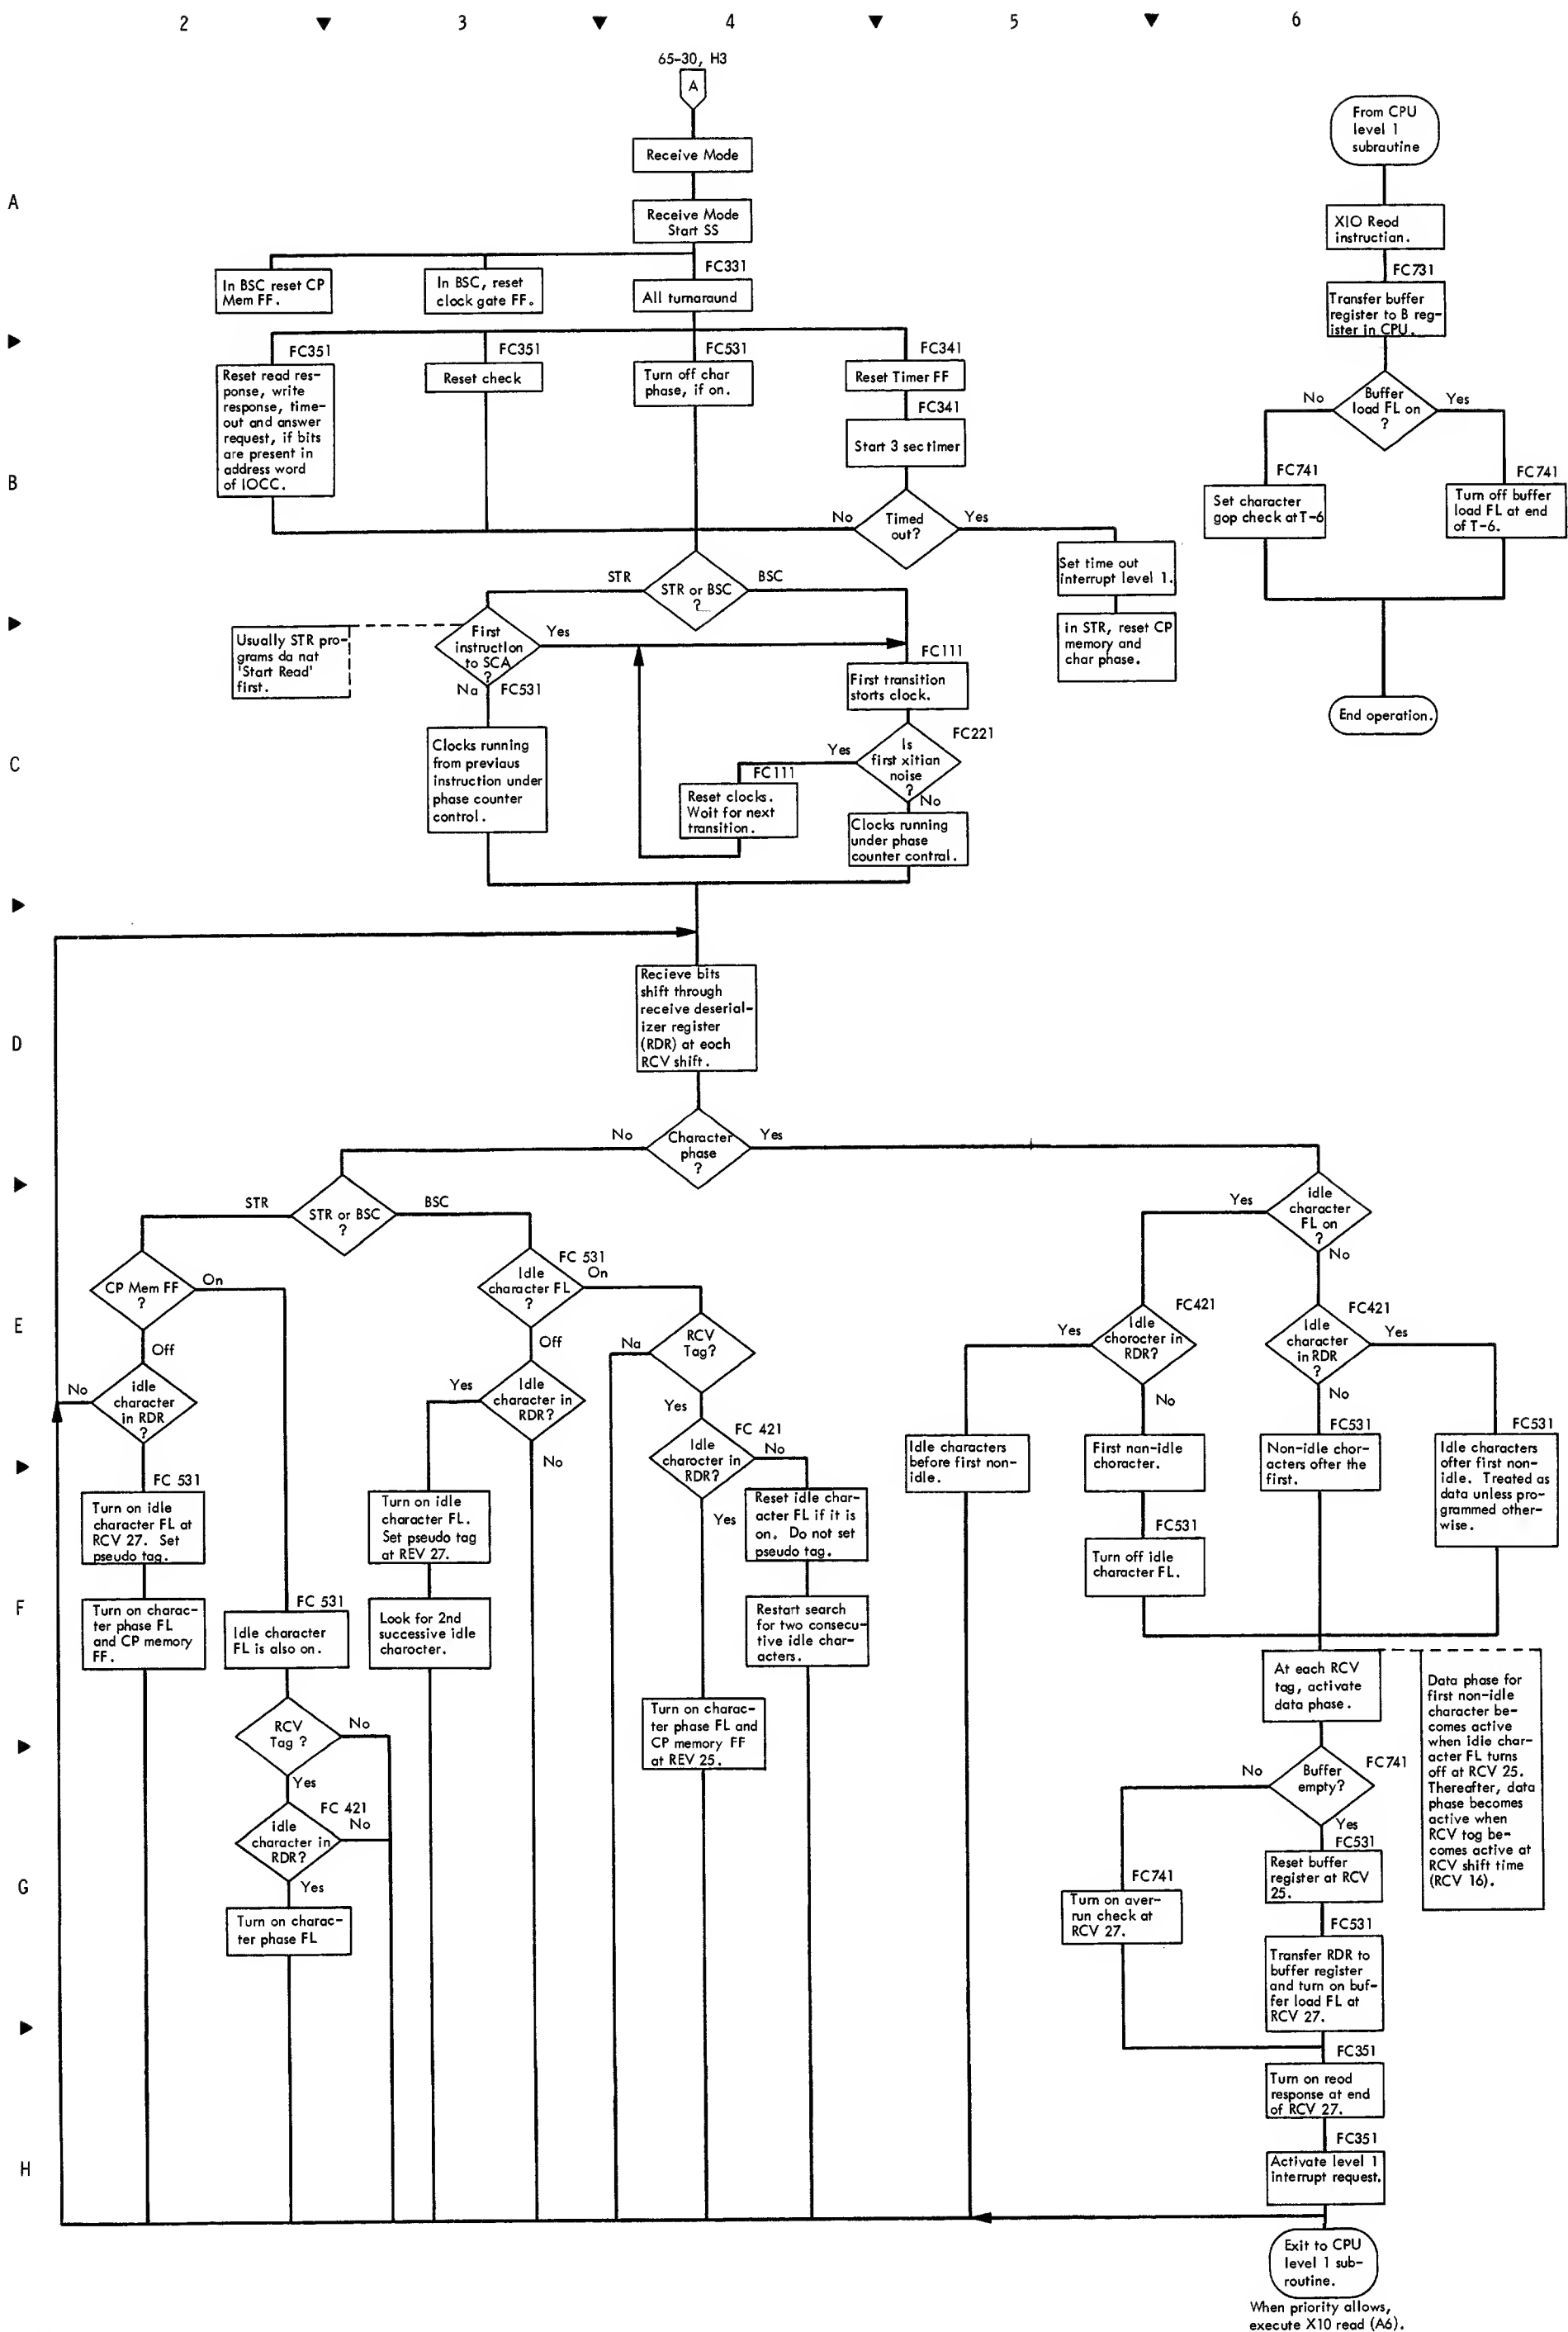


Diagram 65-40. Start Read (Part 2) and Read

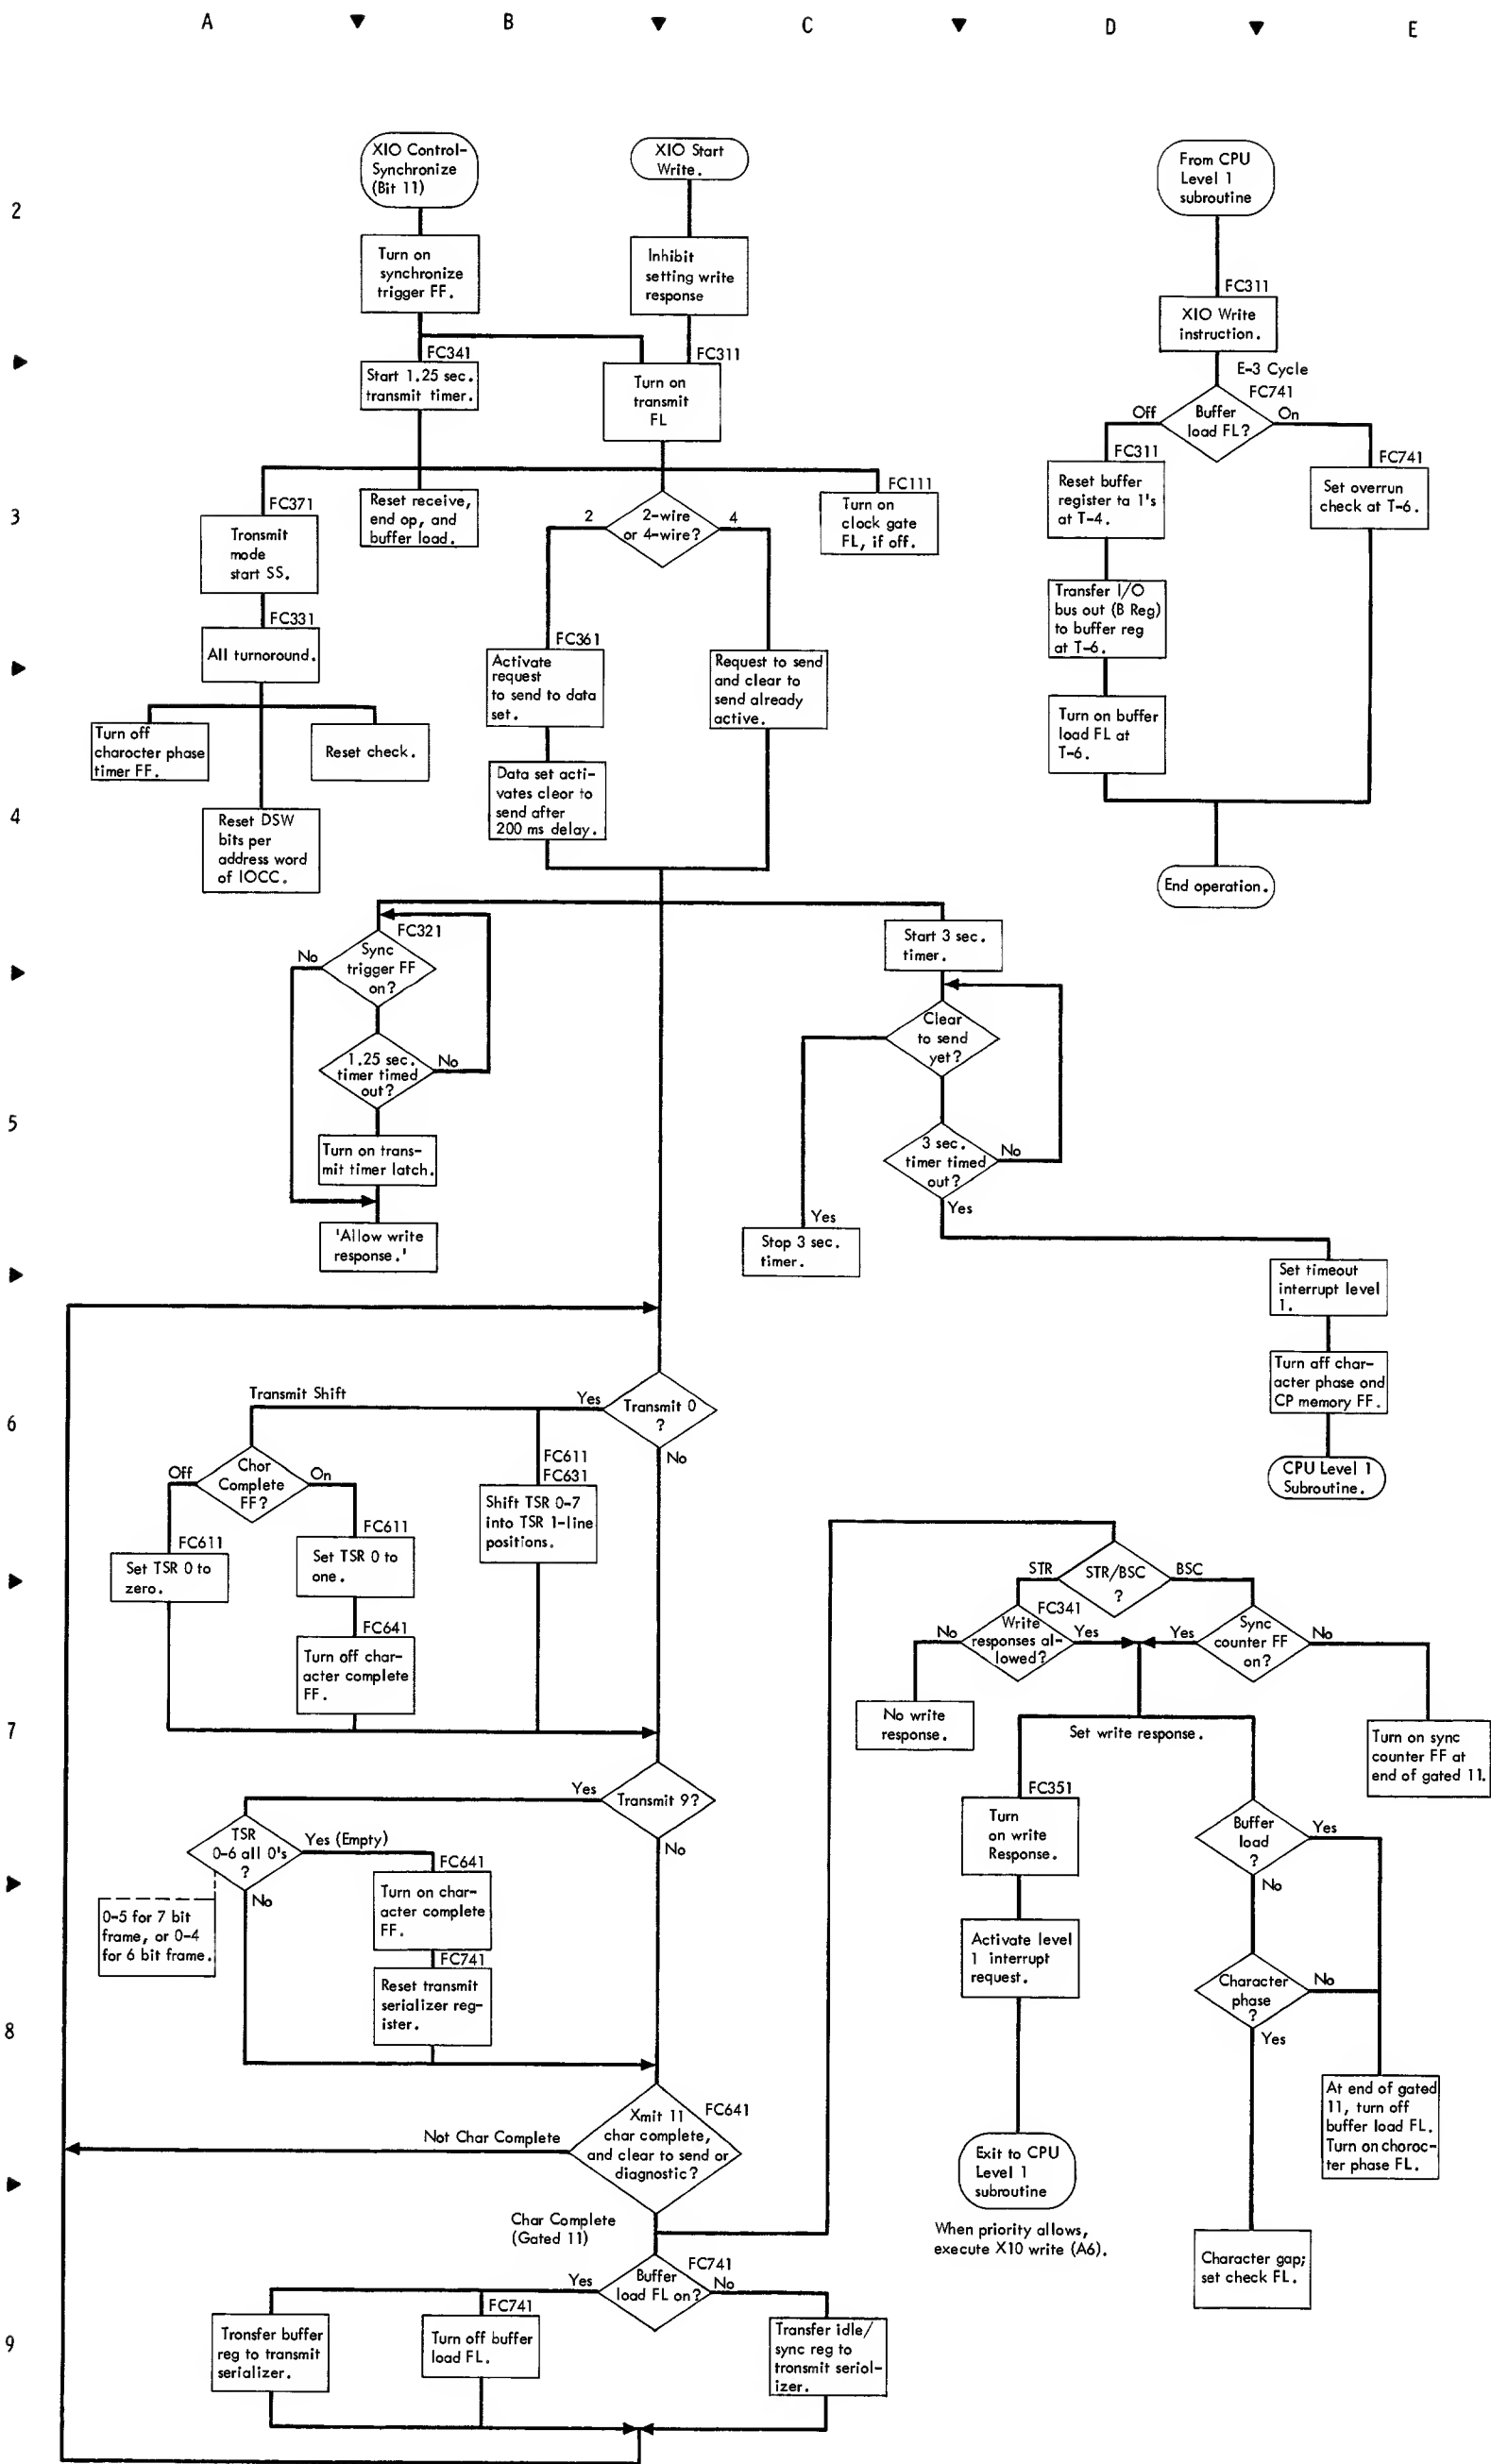
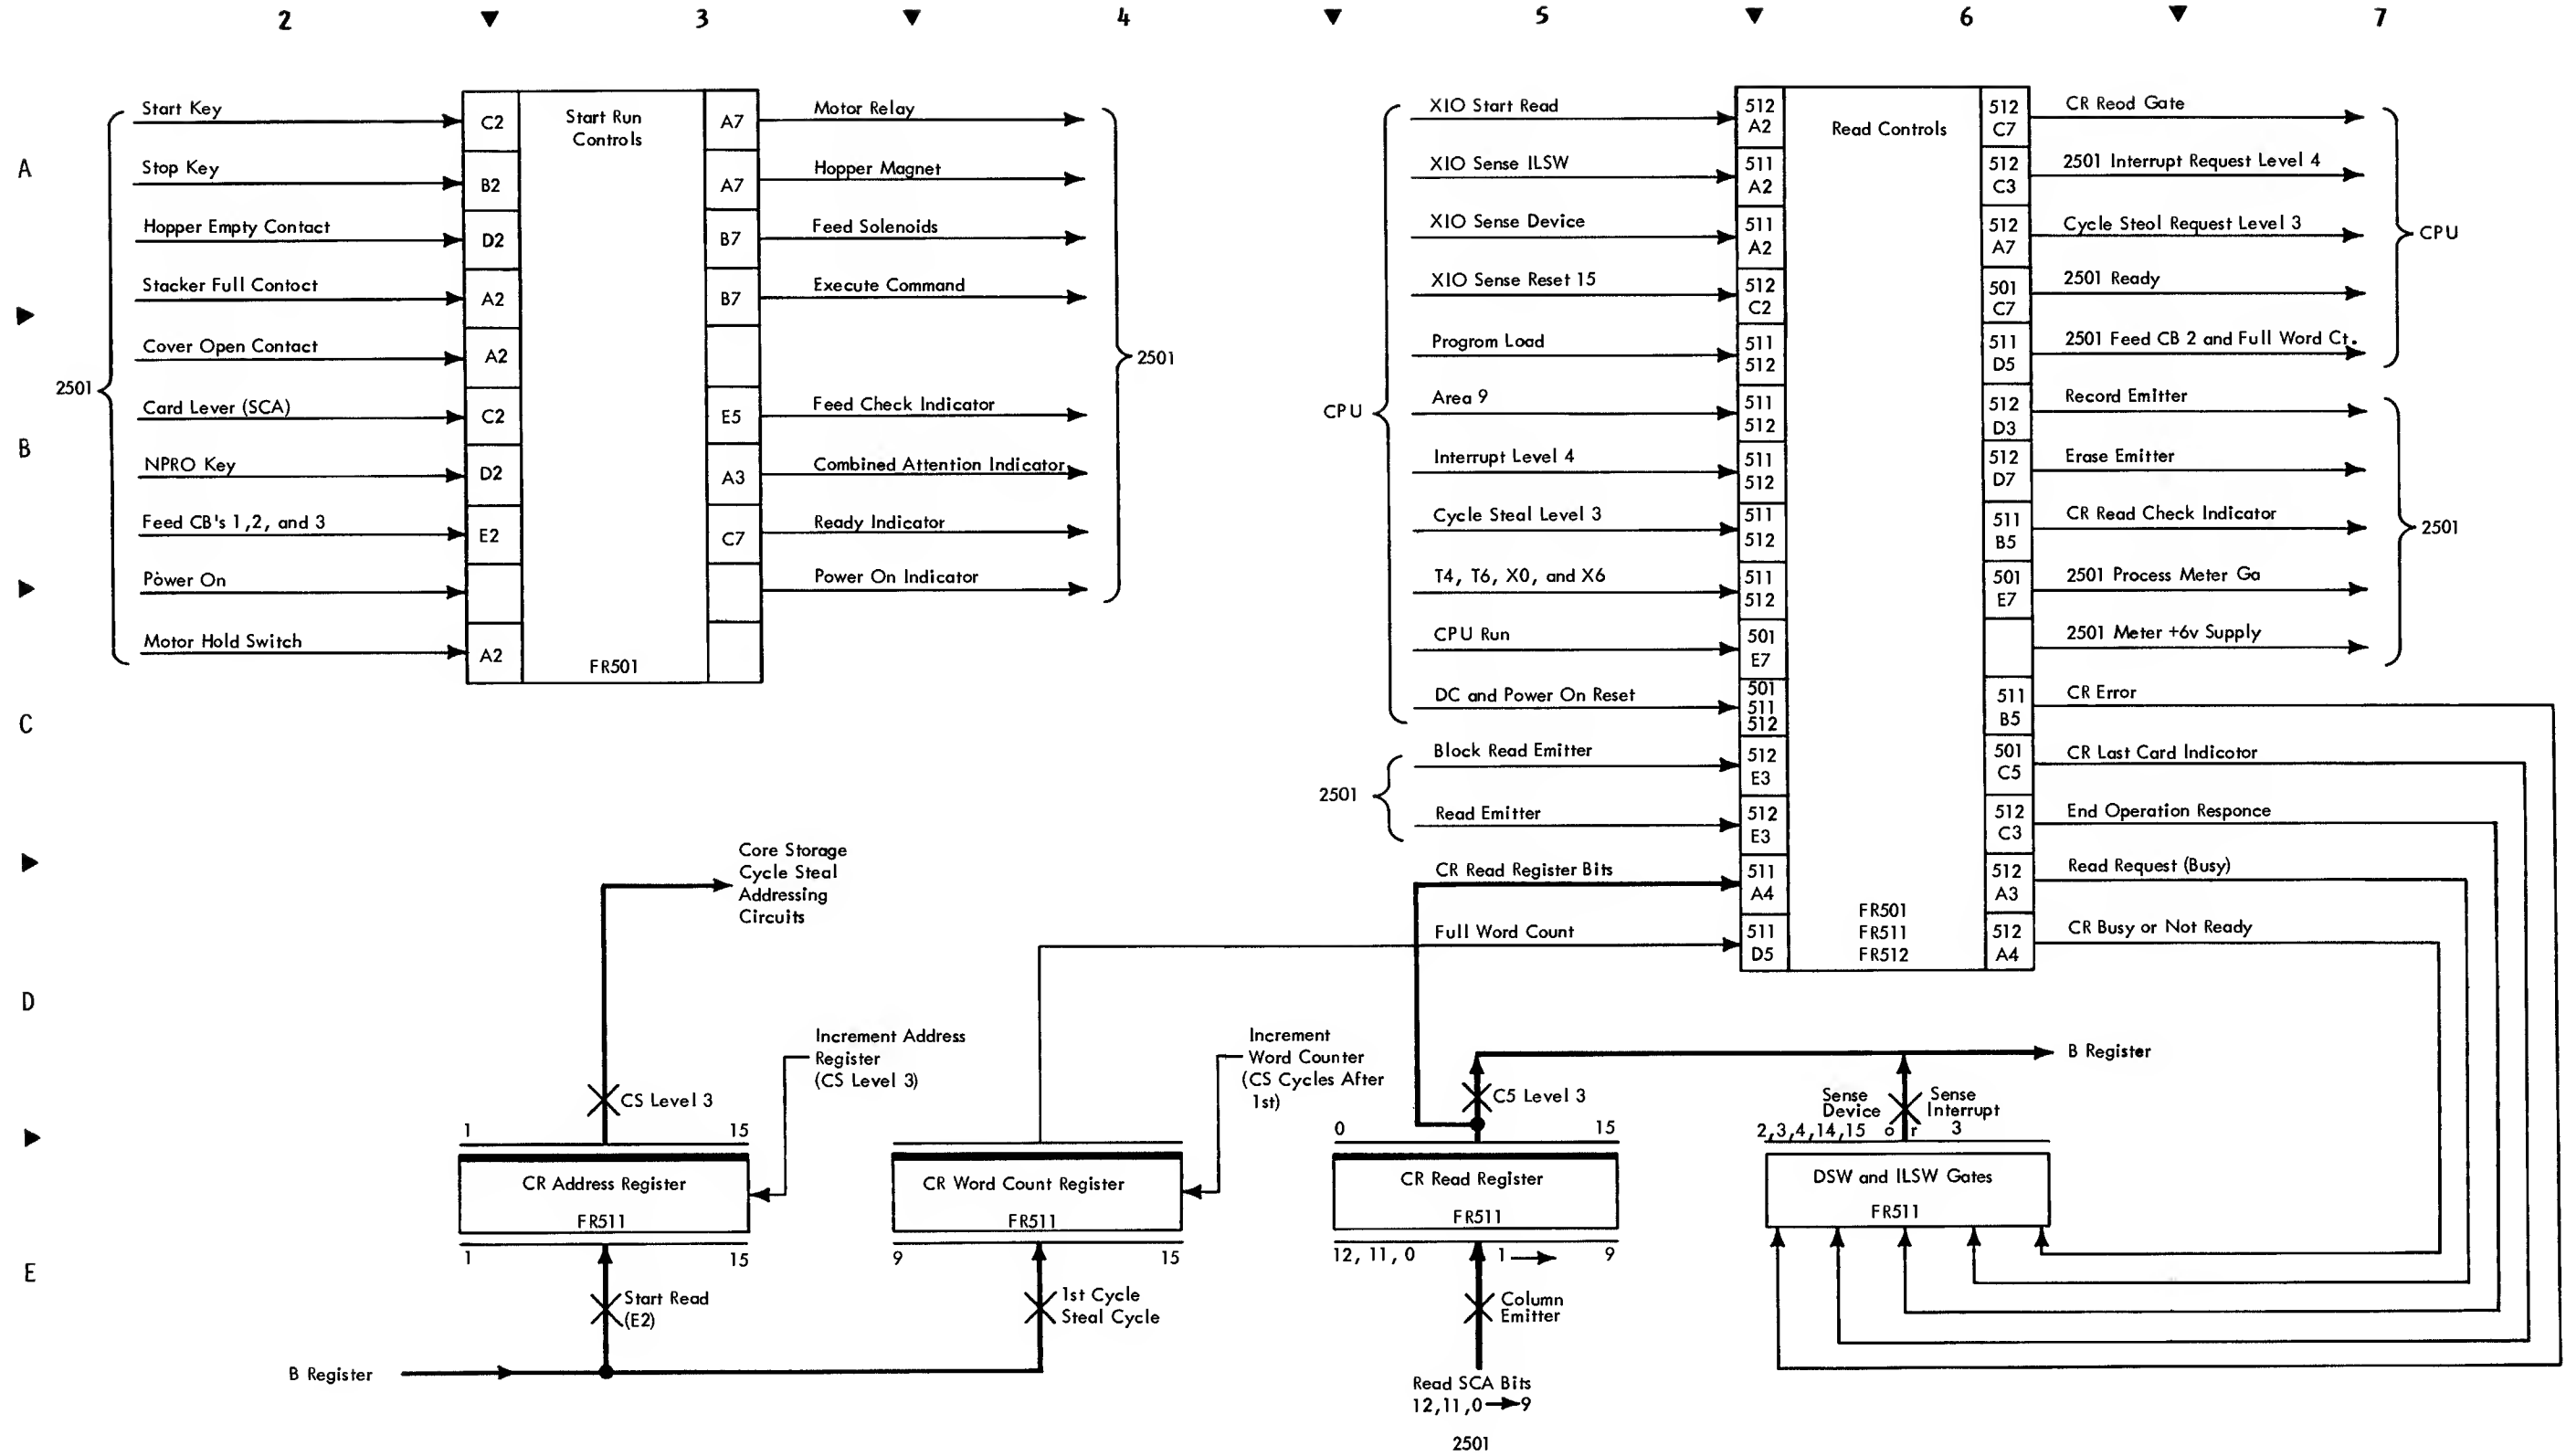



Diagram 65-50. Synchronize, Start Write, and Write

Diagram FR401. 2501 Card Reader Data Flow and Control



 

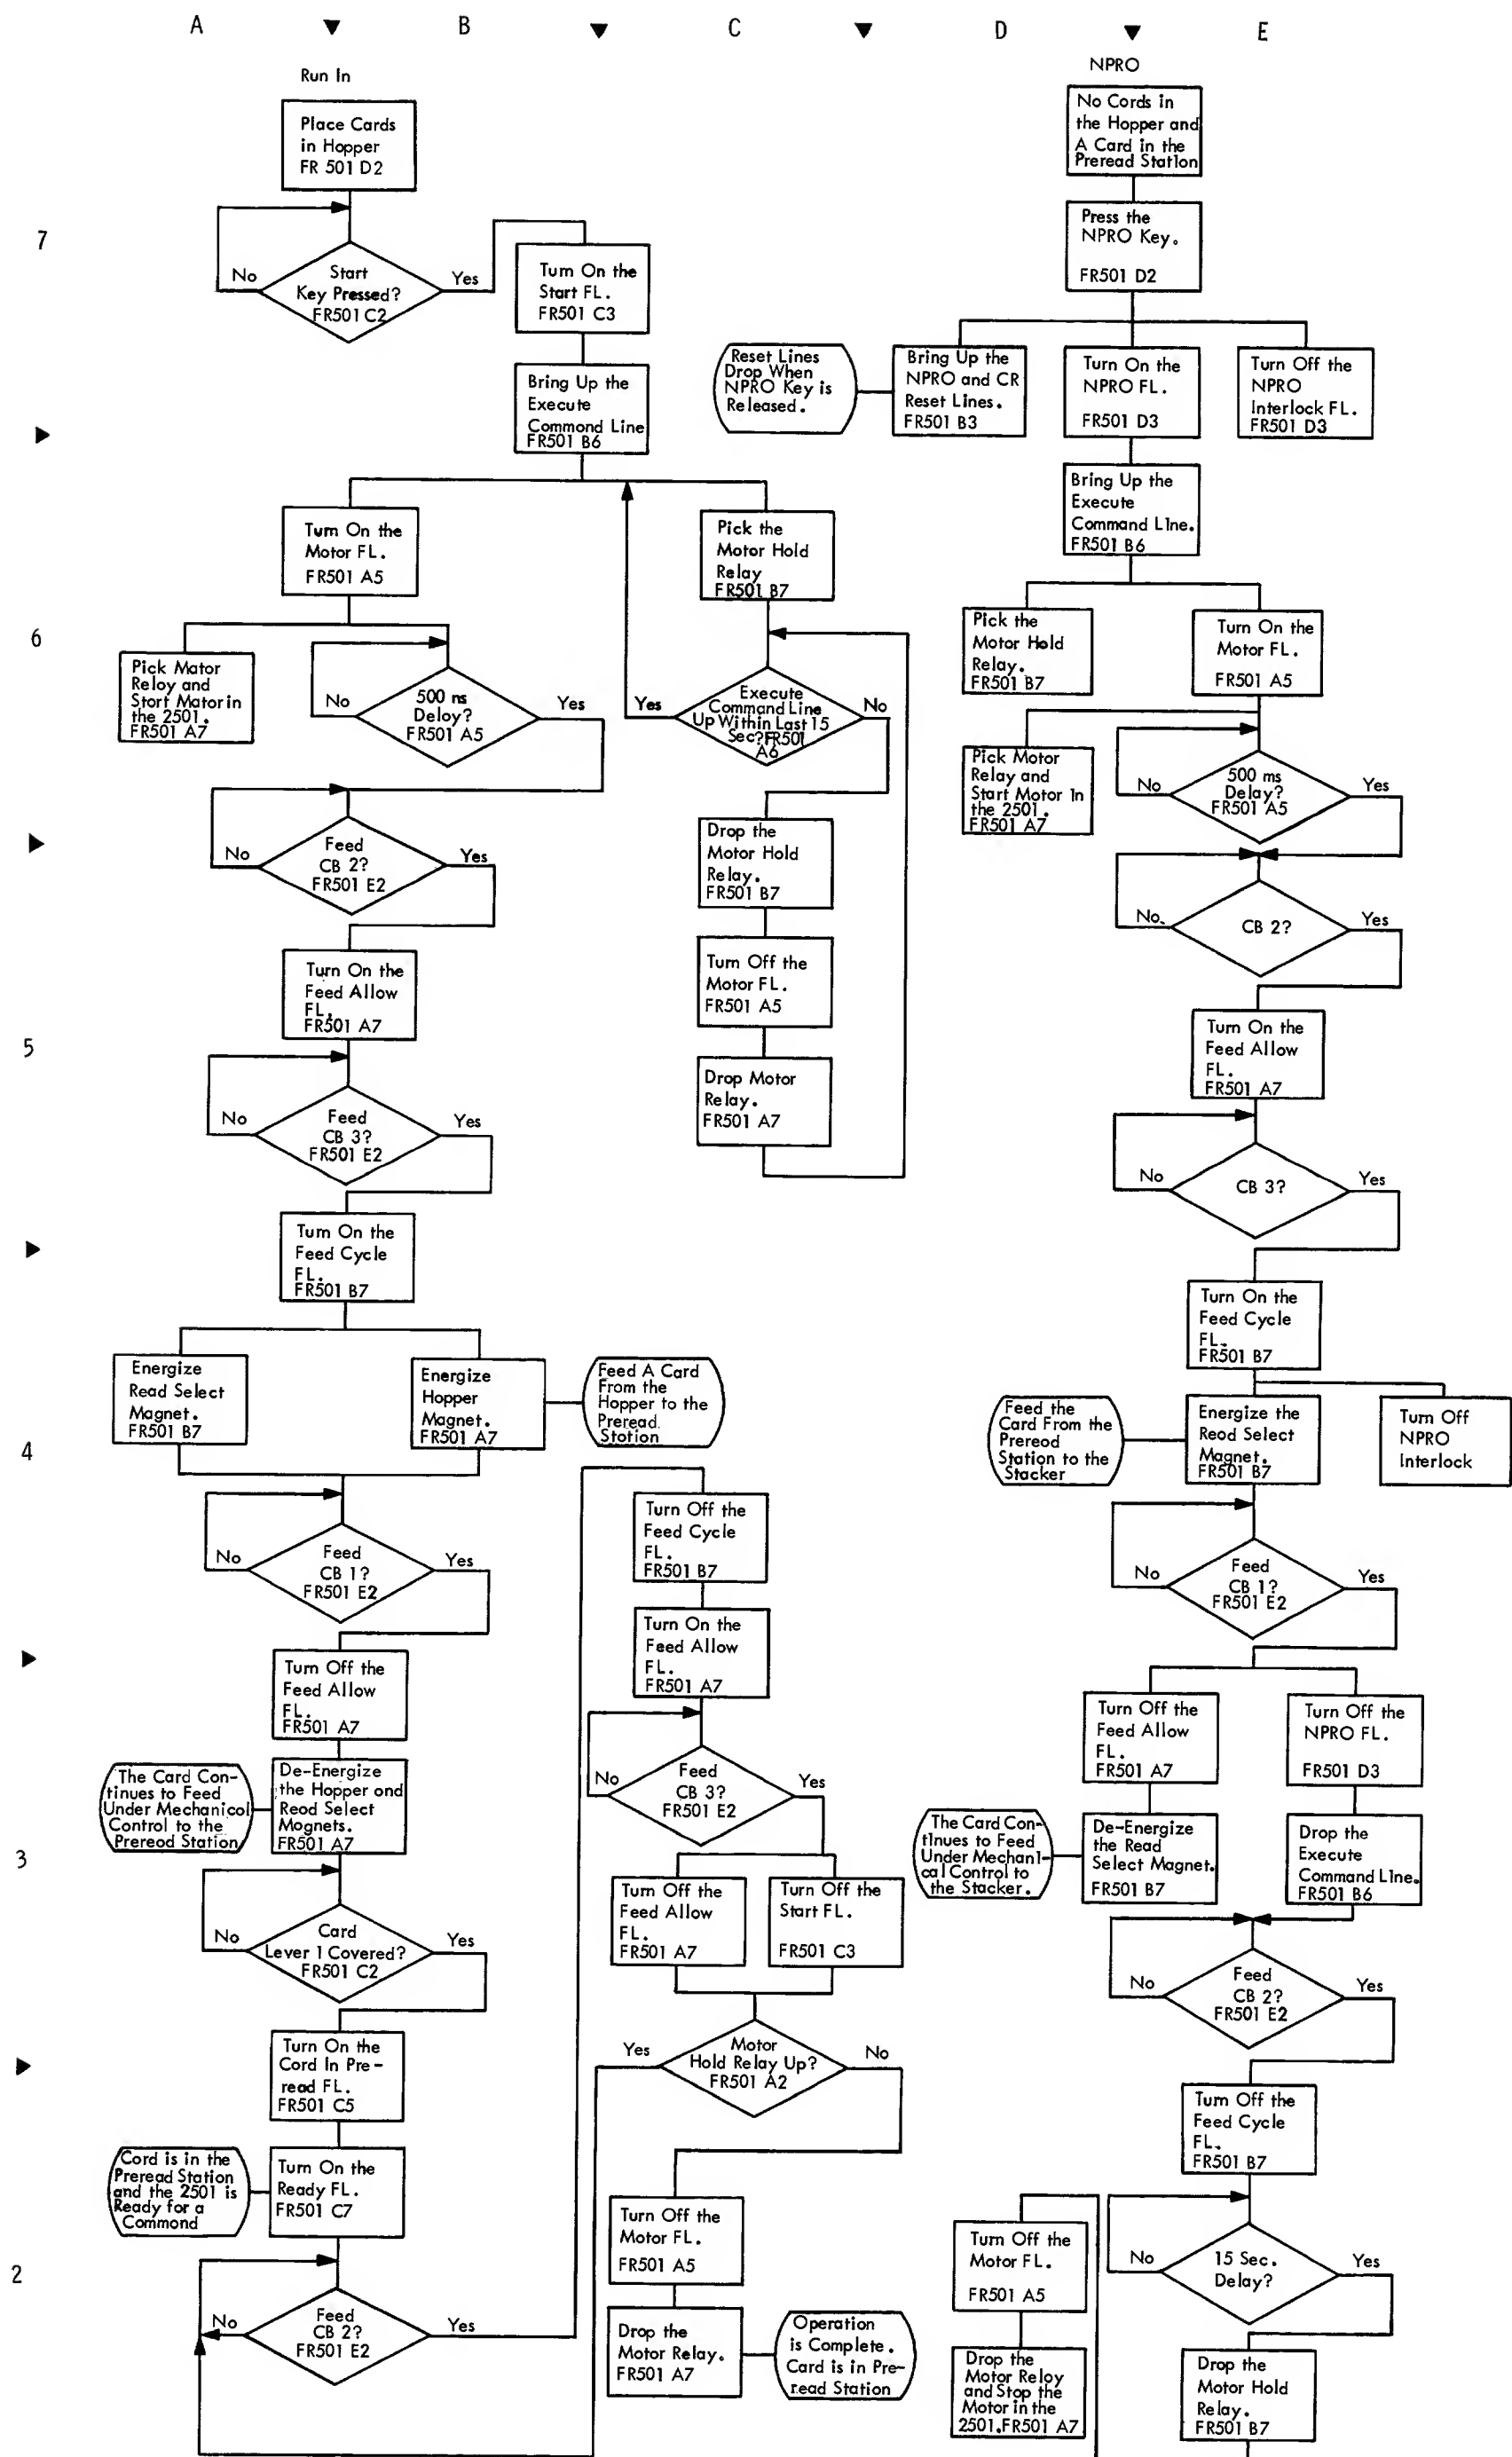


Diagram FR413. 2501 Run In - NPRO

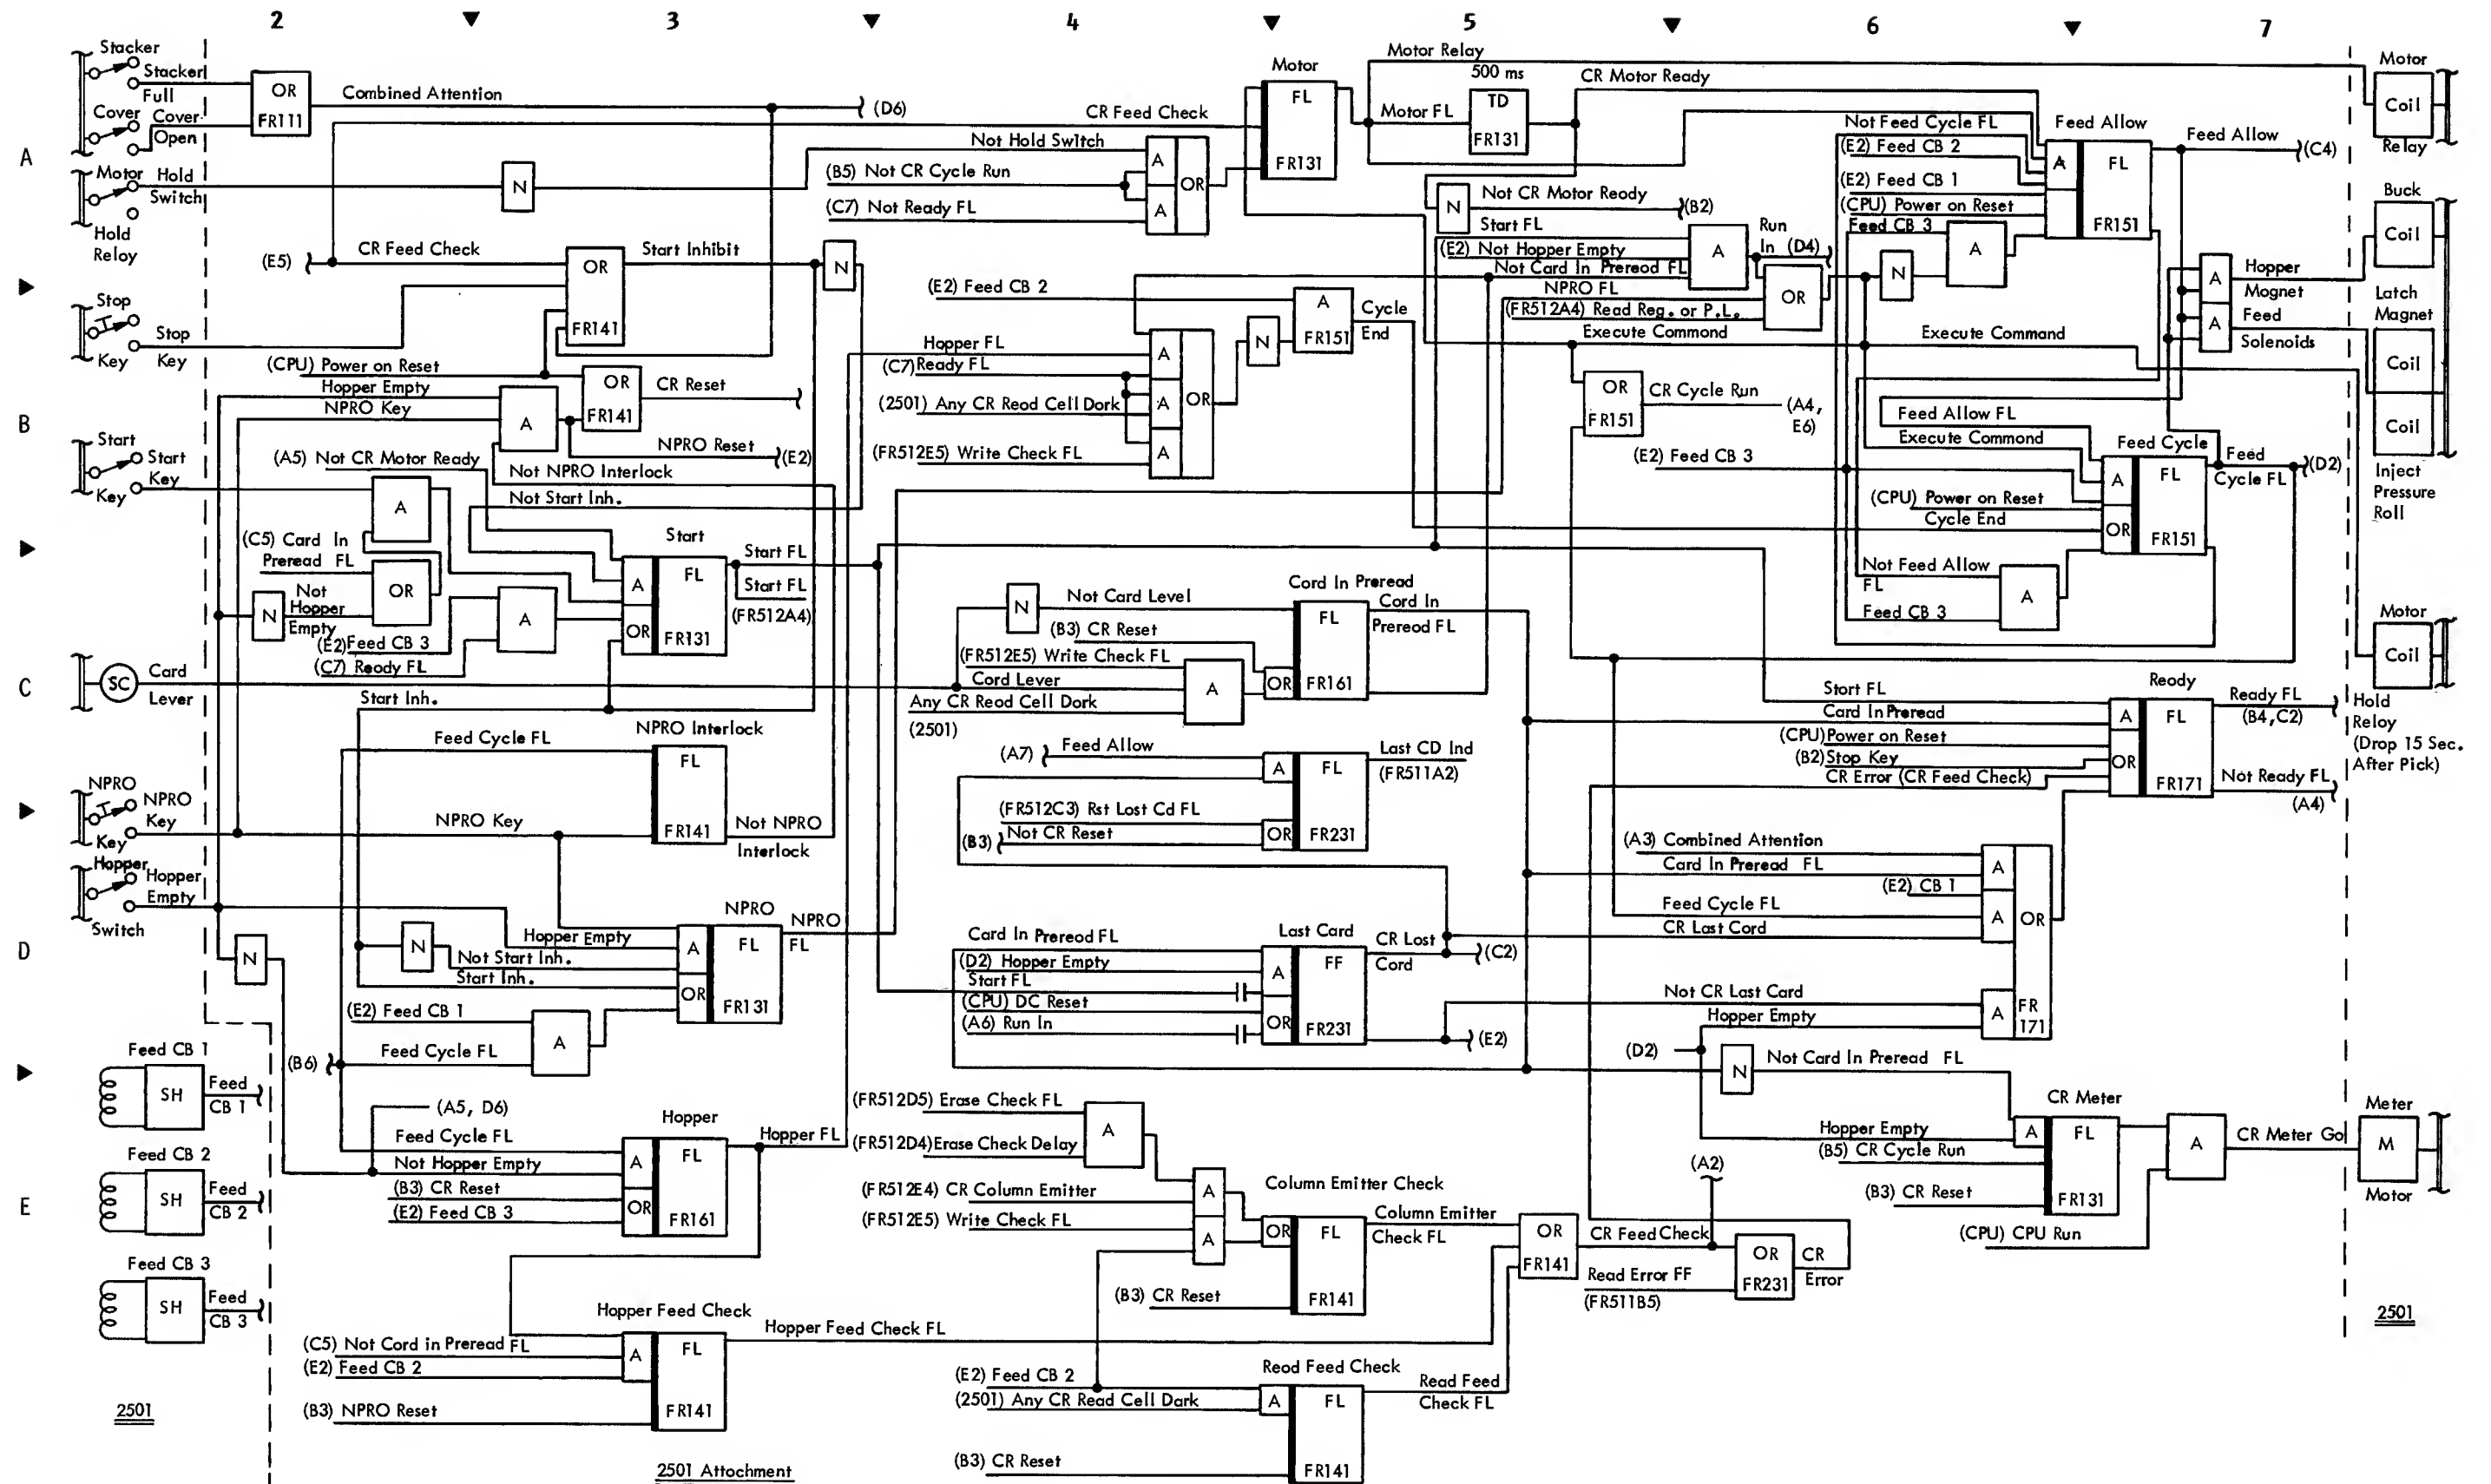
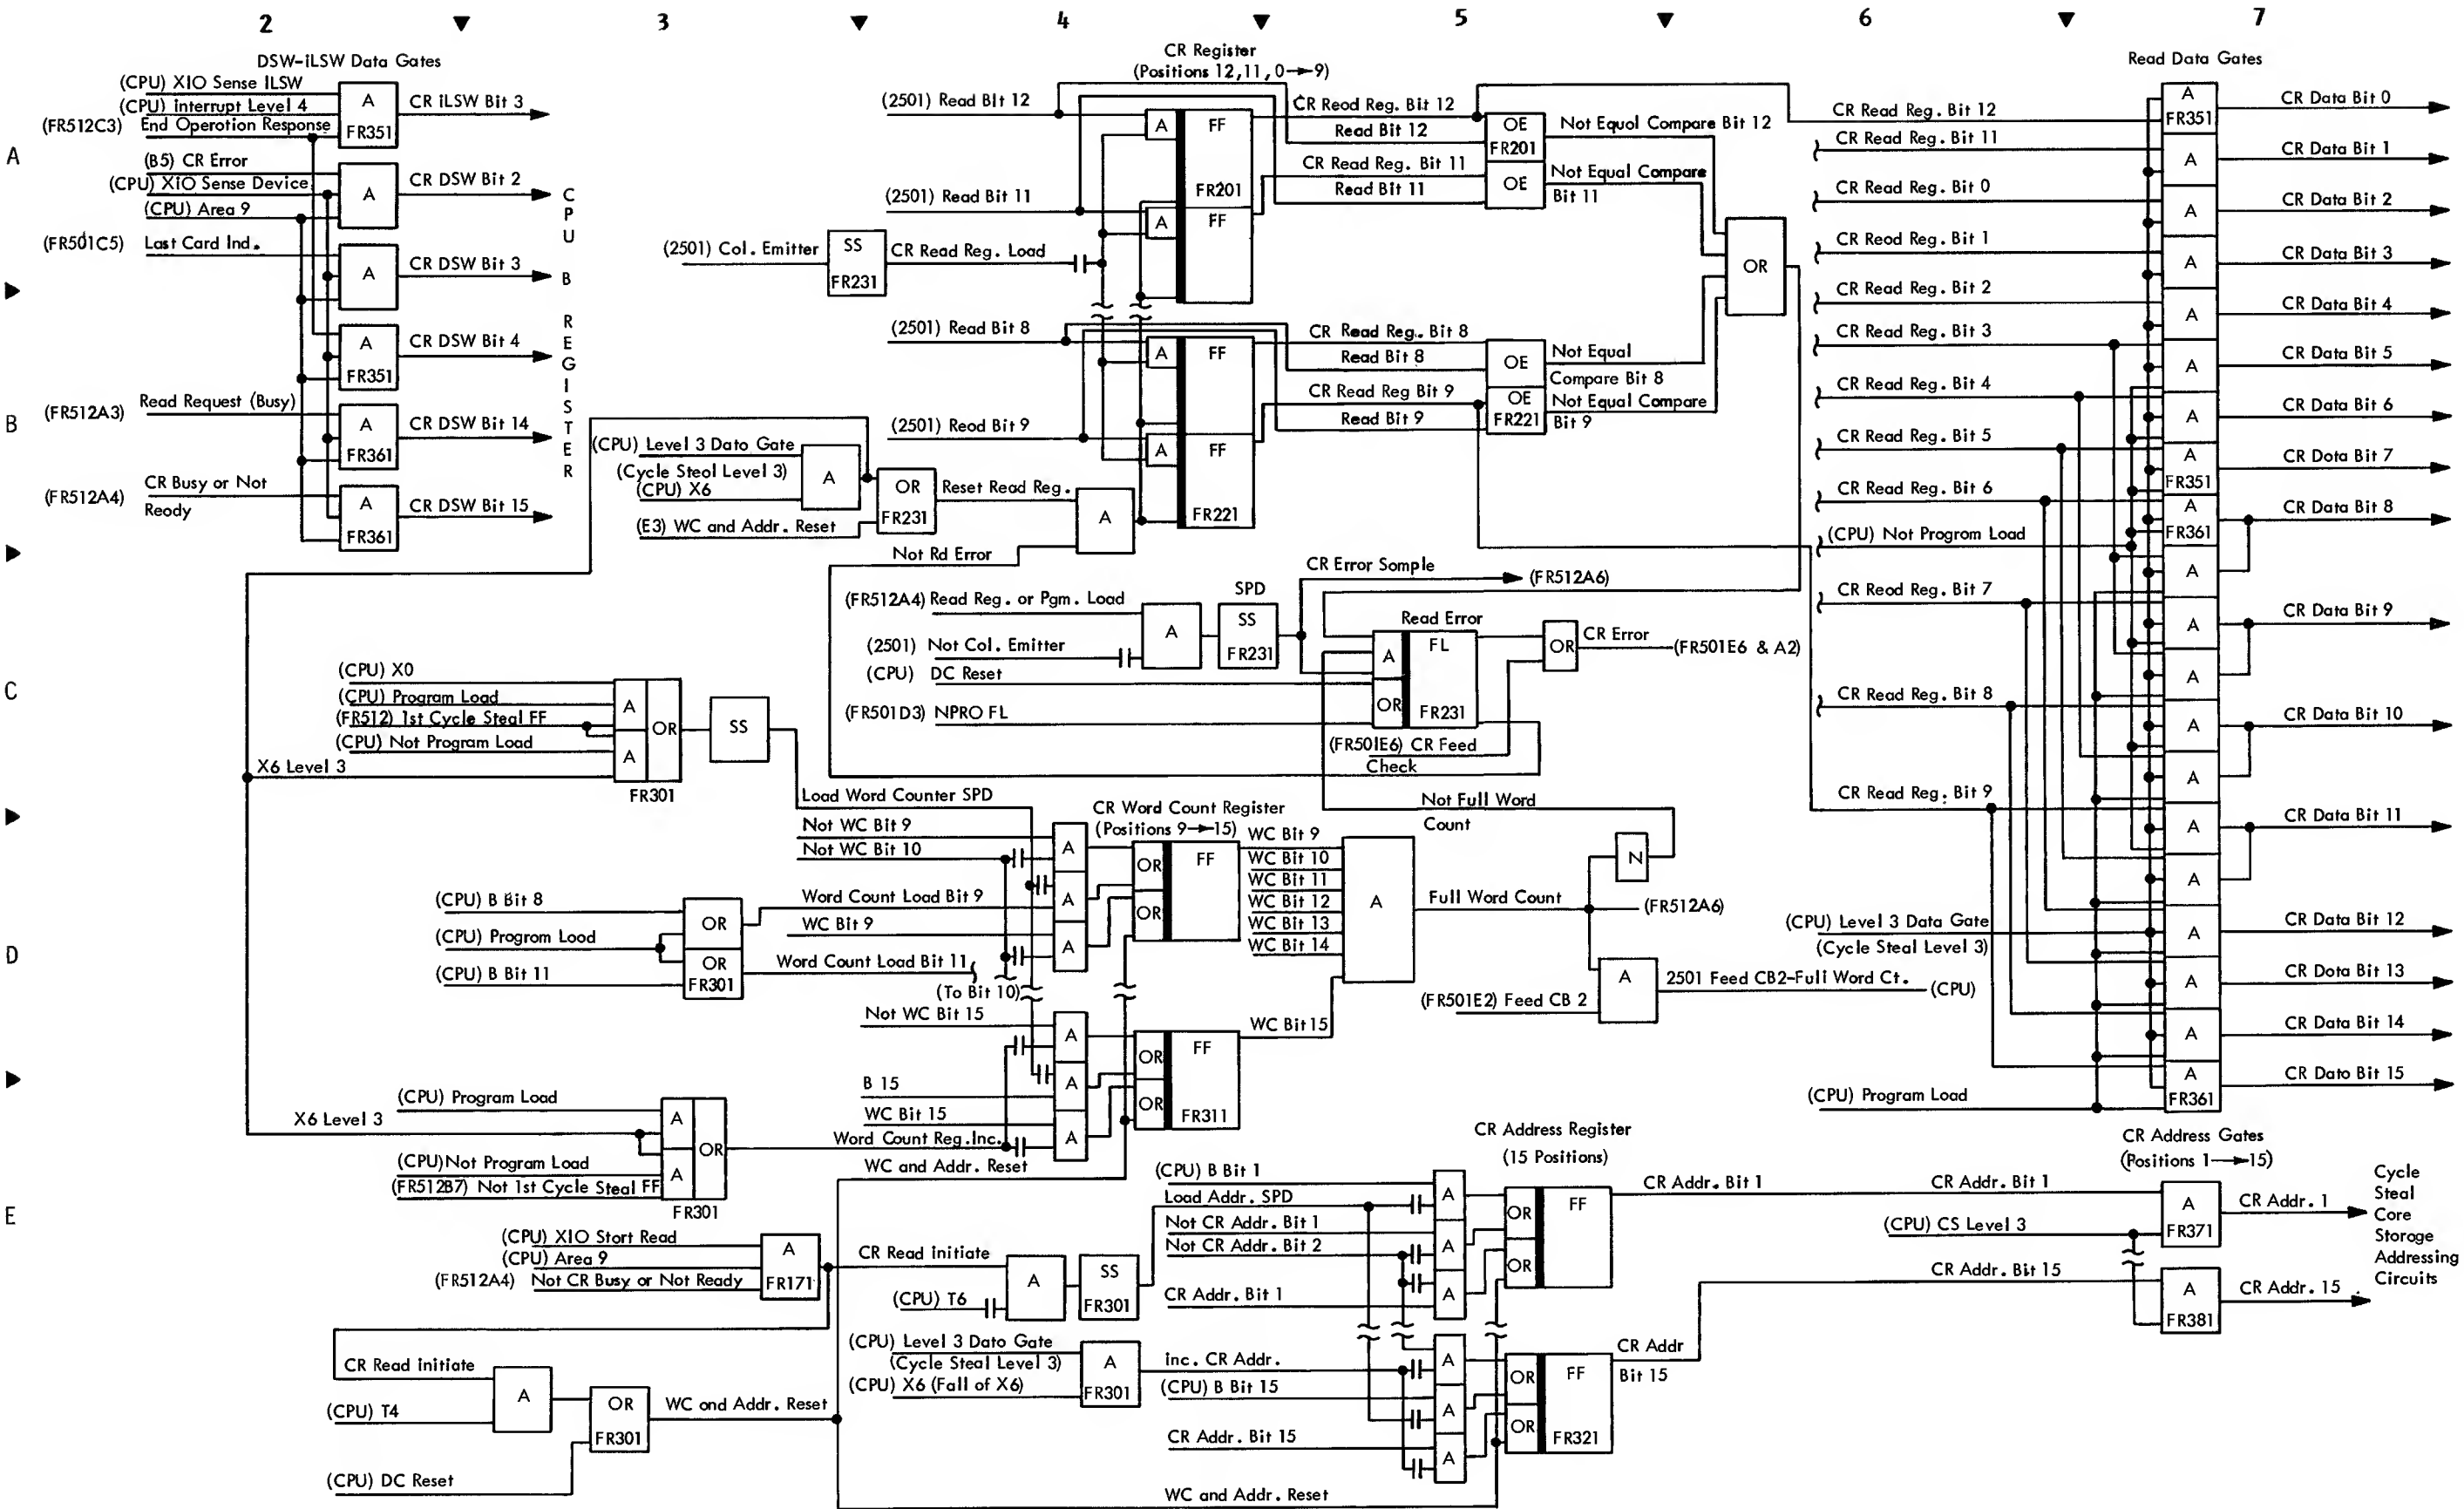


Diagram FR501. 2501 Start-Run

Diagram FR 511. 2501 Read (Part 1 of 2)




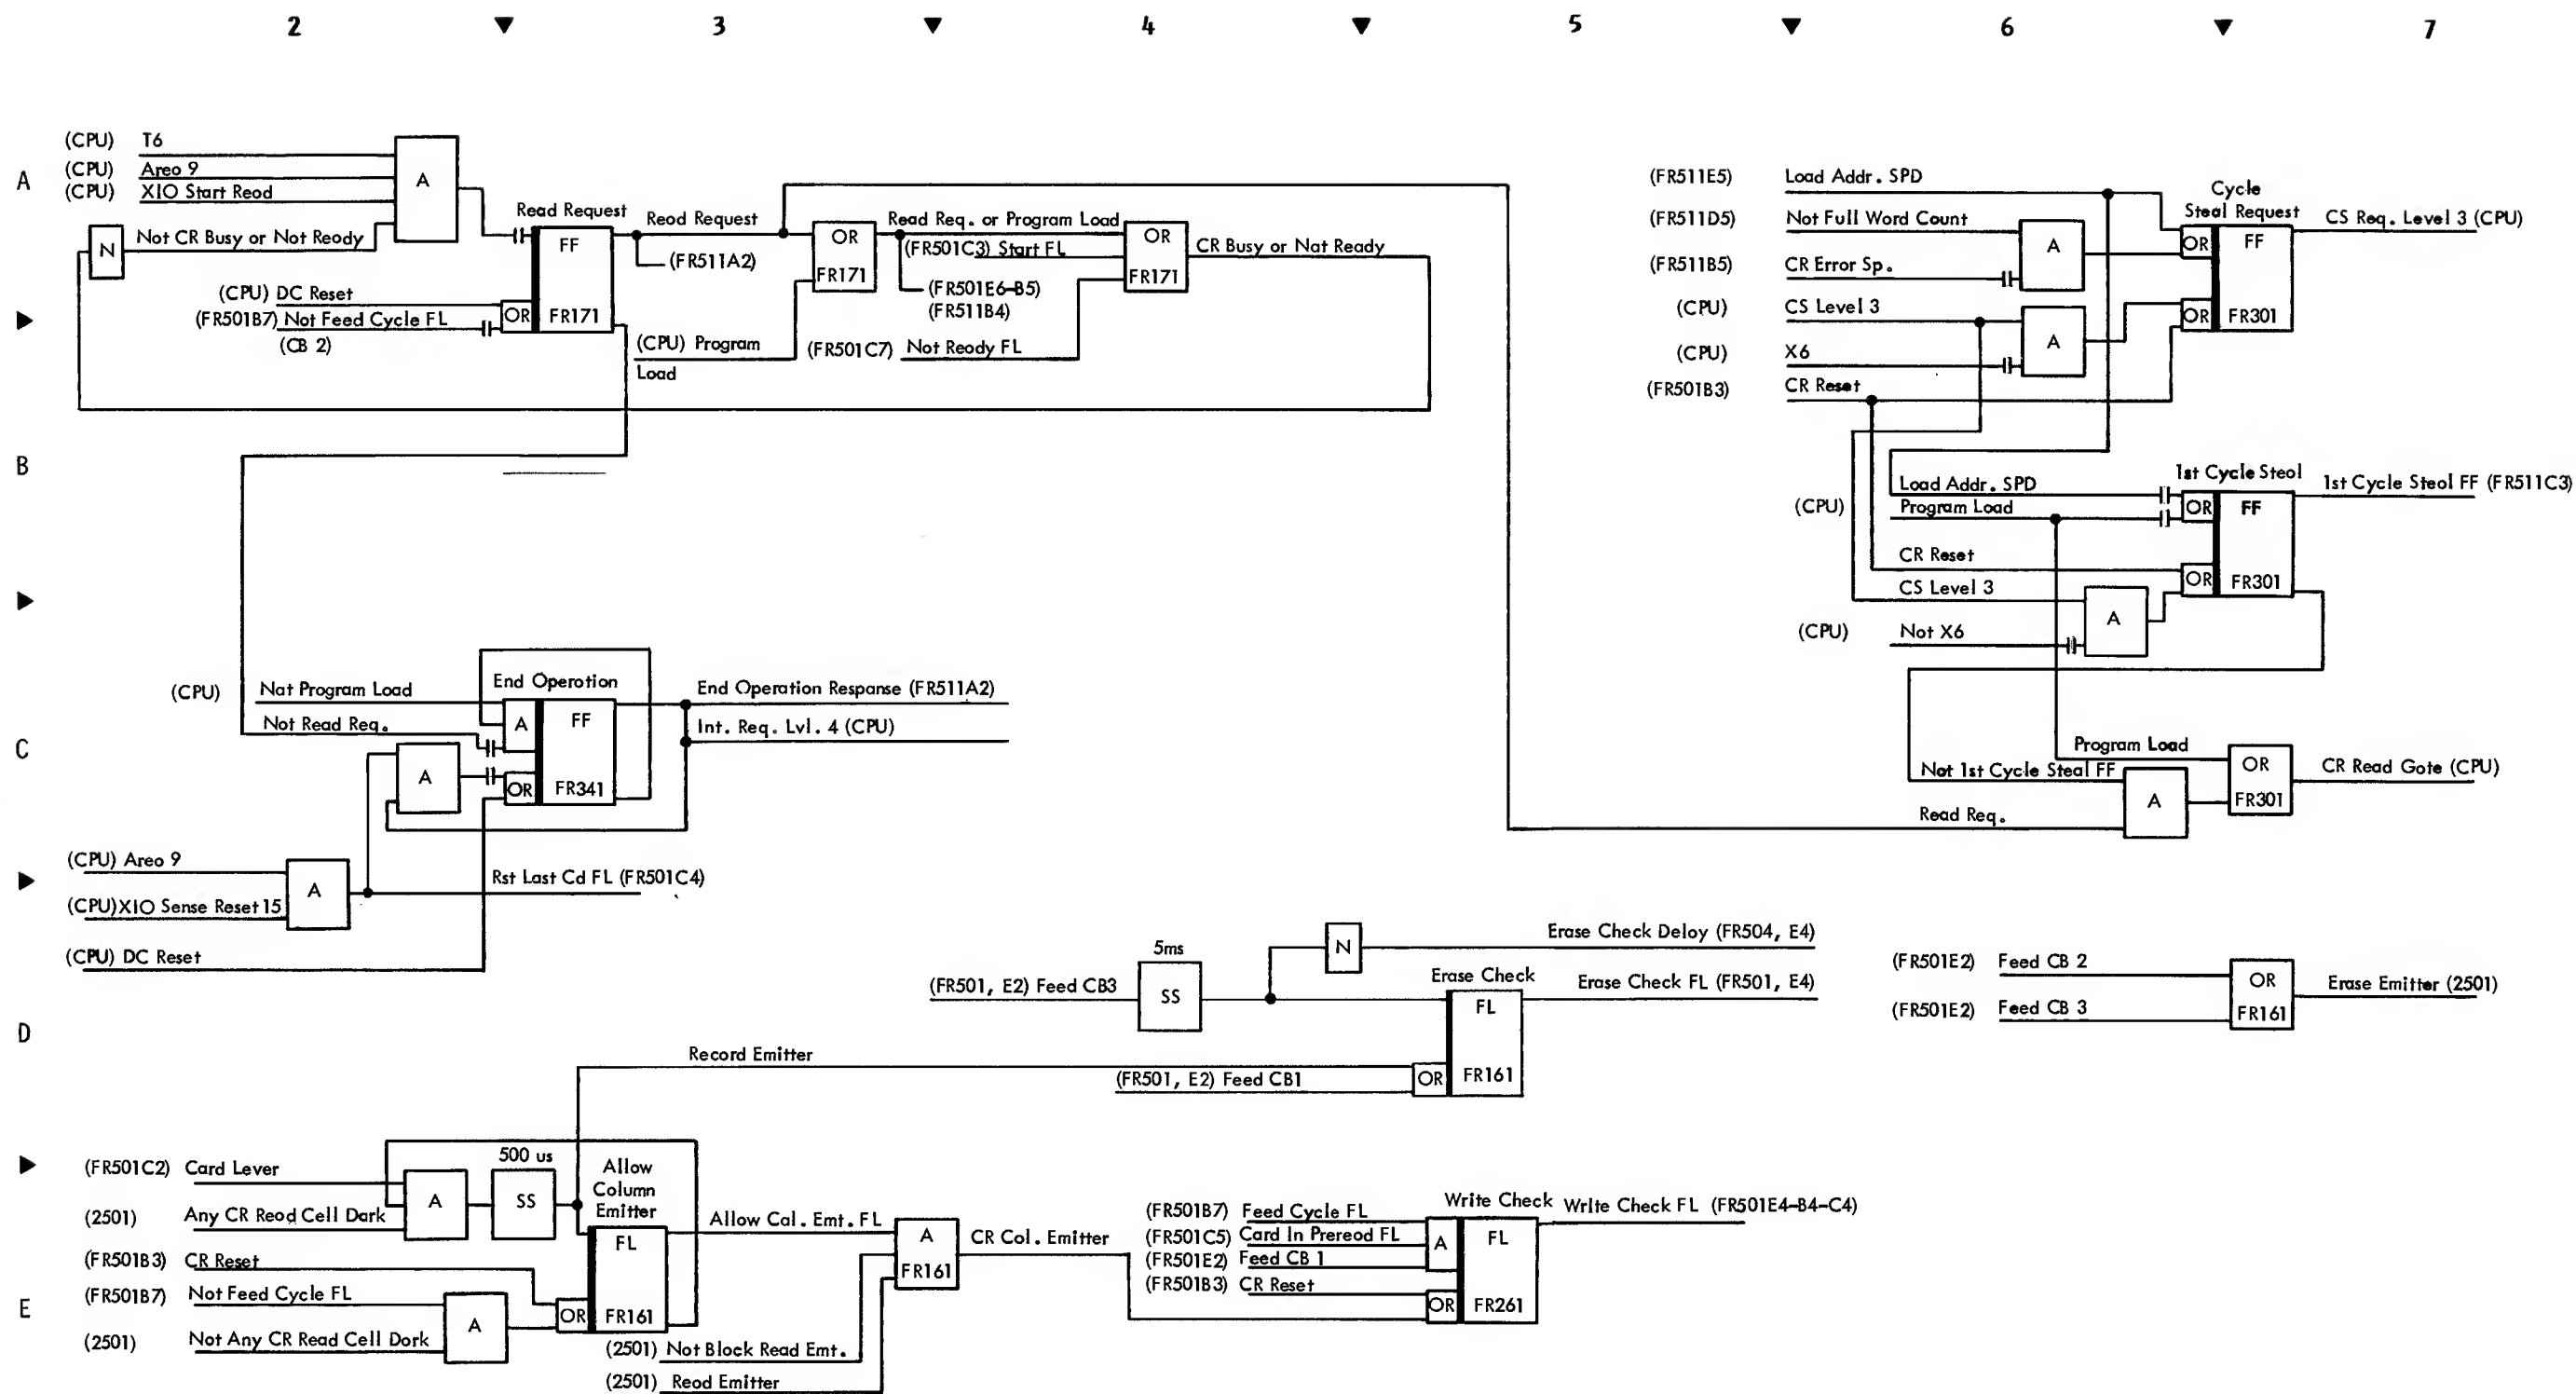


Diagram FR512. 2501 Read (Part 2 of 2)

Diagram 83-10. 1231 Data Flow and Control

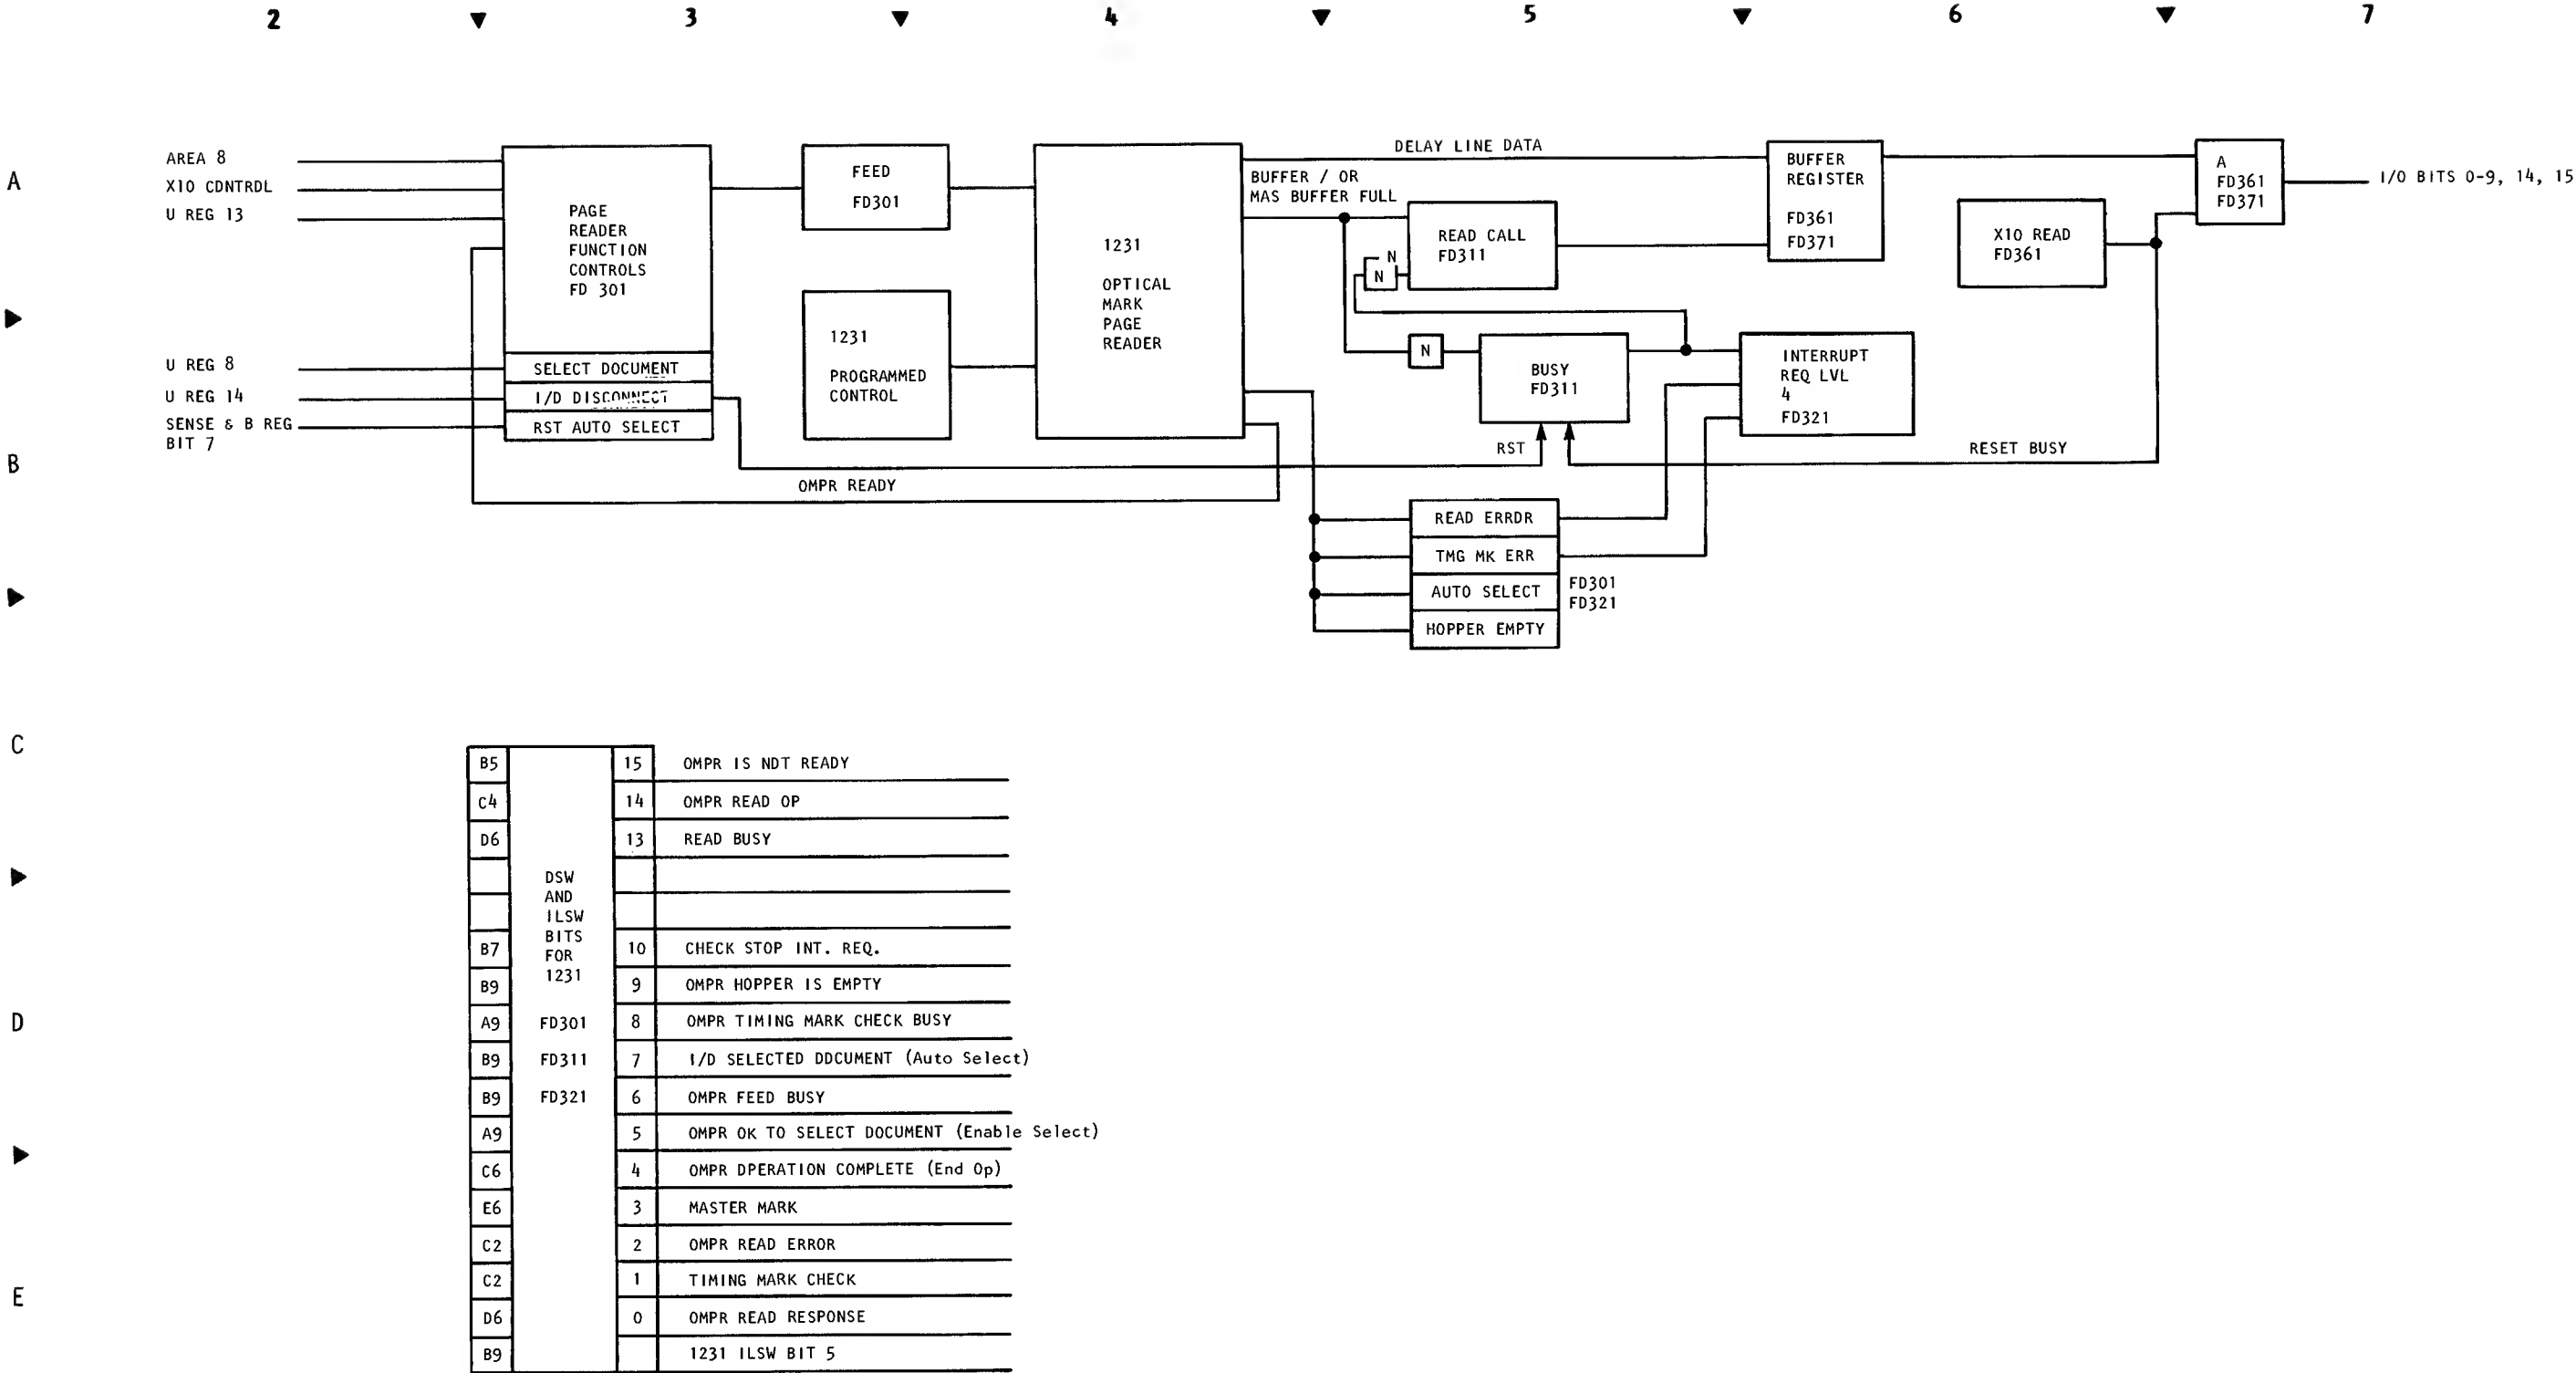

Note: References in left column are co-ordinates for Diagram 84-10.

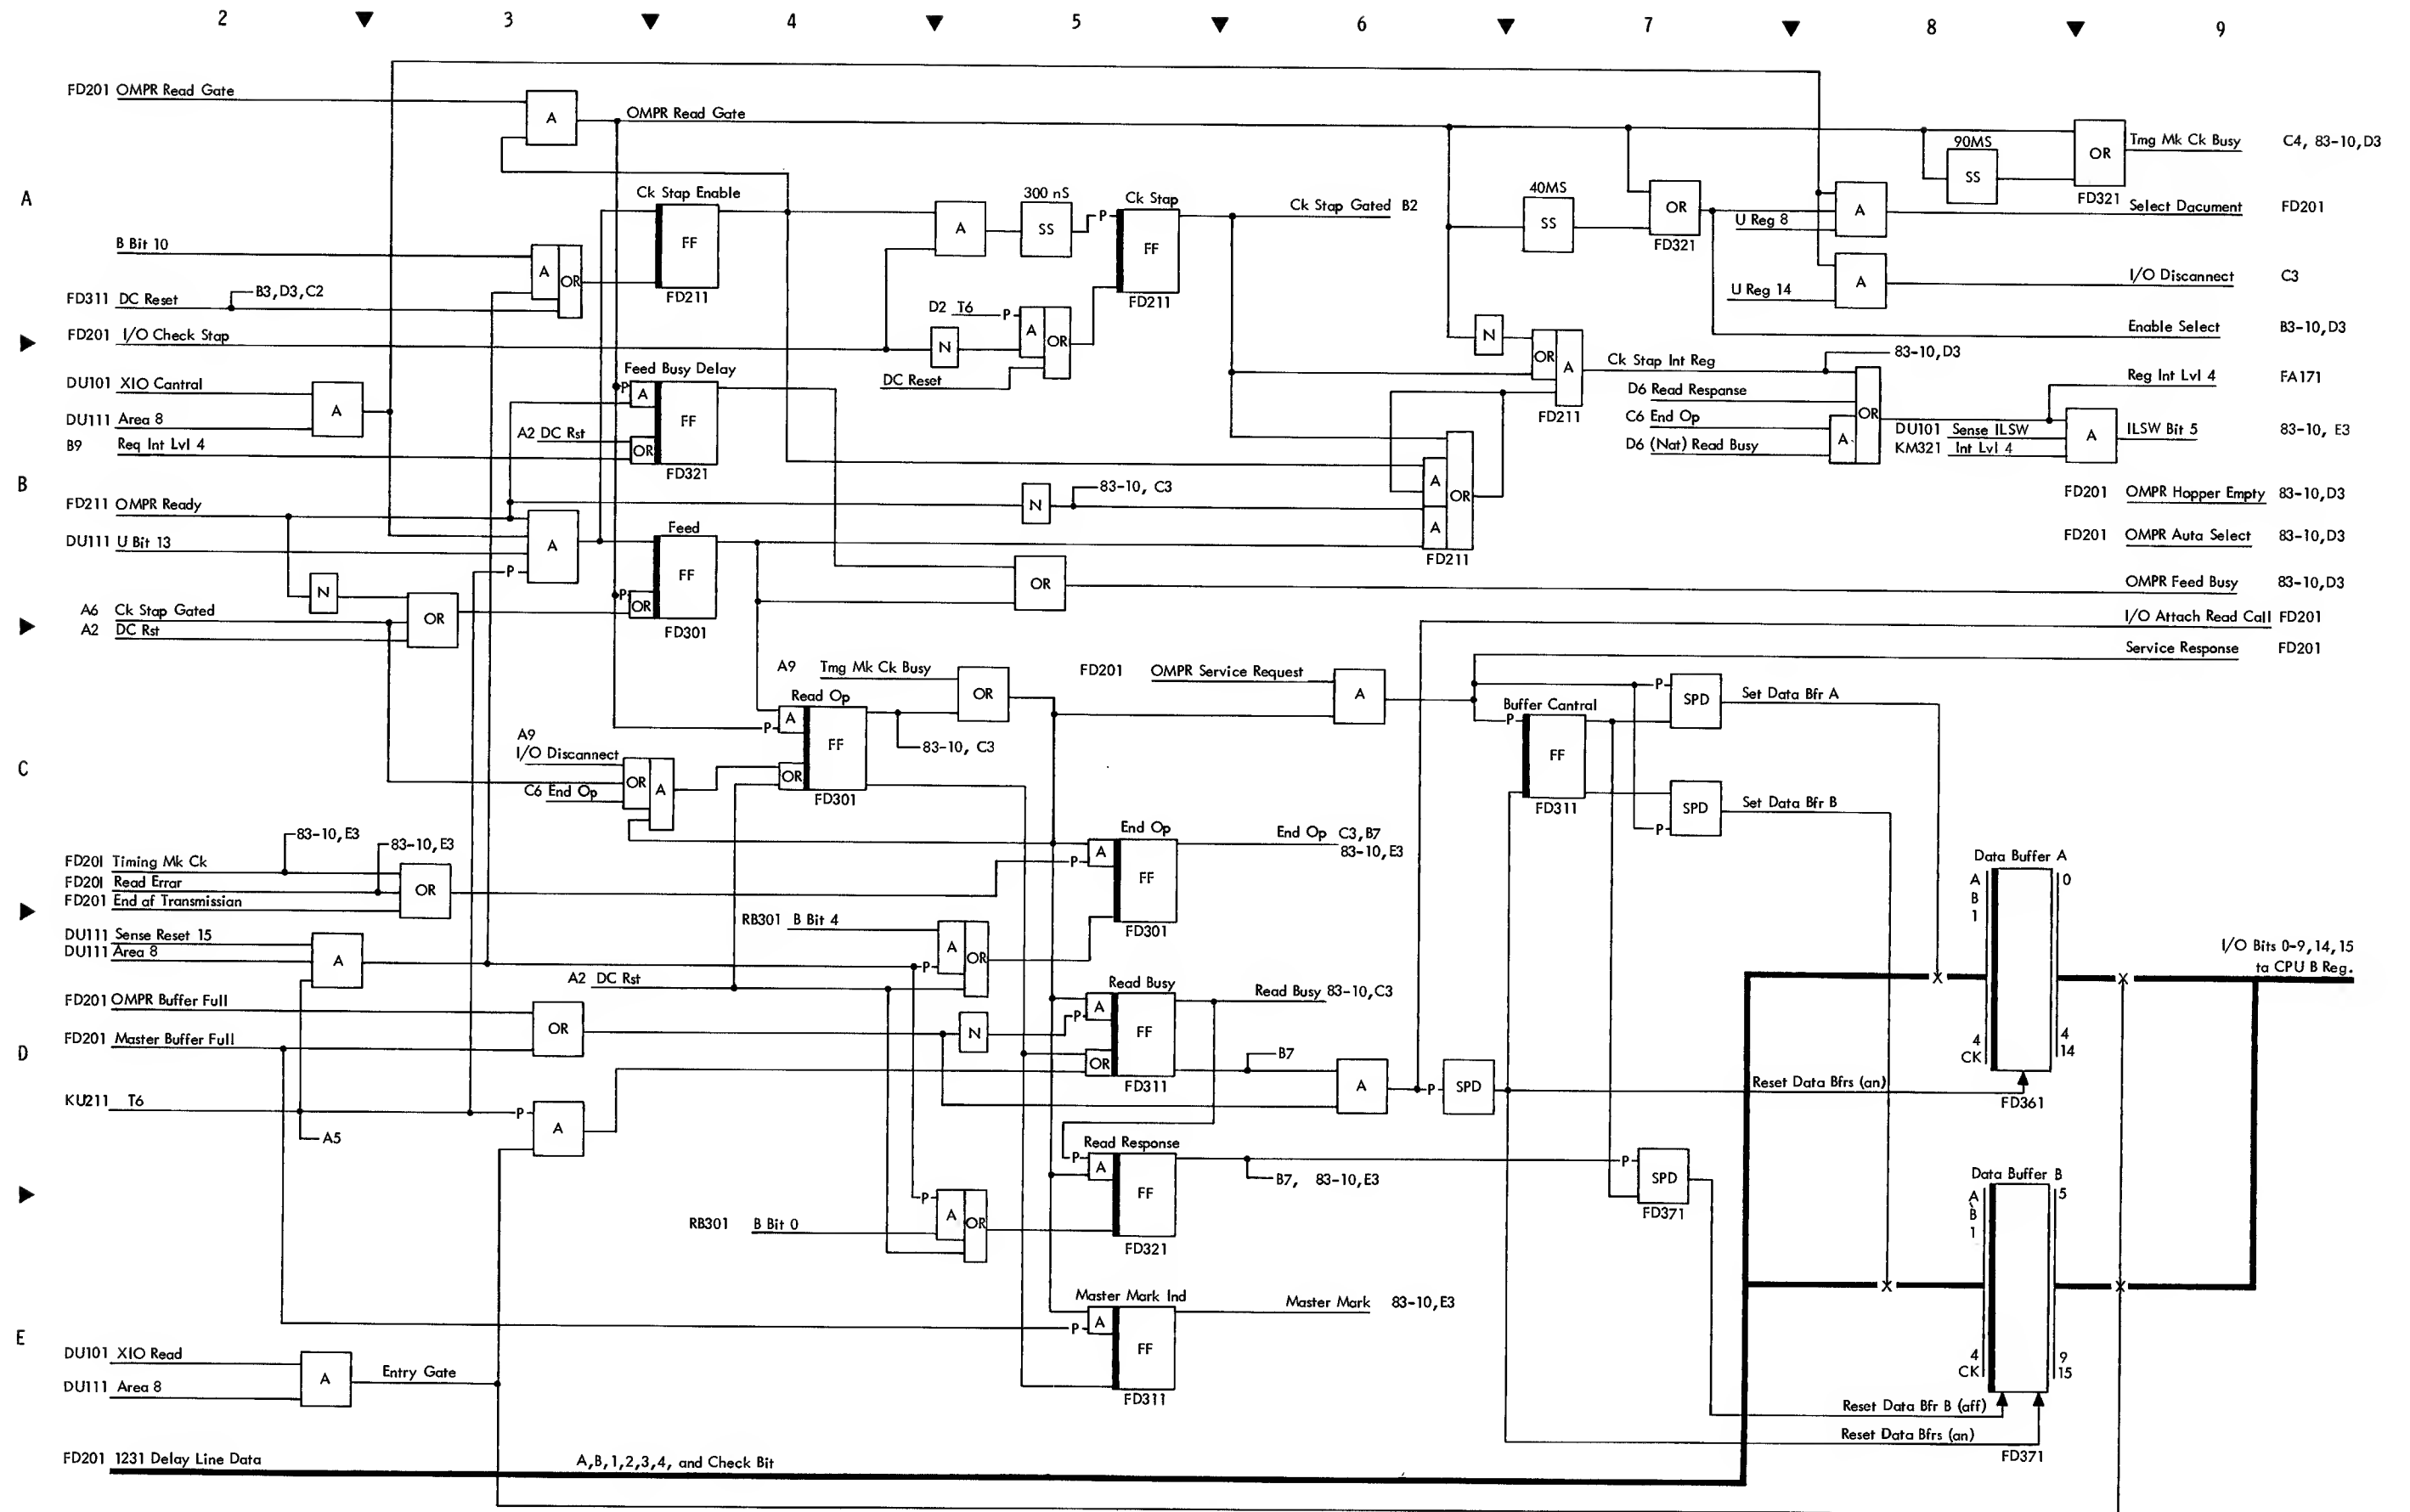


Diagram 84-10. 1231 OMPR Read

READER'S COMMENT FORM

1130 Features FEMDM

SY26-4003-3

● How did you use this publication?

As a reference source ☐
As a classroom text ☐
As..... ☐

● Based on your own experience, rate this publication...

As a reference source:
	Very	Good	Fair	Poor	Very
	Good				Poor
As a text:
	Very	Good	Fair	Poor	Very
	Good				Poor

● What is your occupation?

● We would appreciate your other comments; please give specific page and line references where appropriate. If you wish a reply, be sure to include your name and address.

● Thank you for your cooperation. No postage necessary if mailed in the U.S.A.

READER'S COMMENT FORM

1130 Features FEMDM

SY26-4003-3

● How did you use this publication?

As a reference source ☐
As a classroom text ☐
As..... ☐

● Based on your own experience, rate this publication...

As a reference source:
	Very	Good	Fair	Poor	Very
	Good				Poor
As a text:
	Very	Good	Fair	Poor	Very
	Good				Poor

● What is your occupation?

● We would appreciate your other comments; please give specific page and line references where appropriate. If you wish a reply, be sure to include your name and address.

● Thank you for your cooperation. No postage necessary if mailed in the U.S.A.

YOUR COMMENTS, PLEASE. . .

Your answers to the questions on the back of this form, together with your comments, will help us produce better publications for your use. Each reply will be carefully reviewed by the persons responsible for writing and publishing this material. All comments and suggestions become the property of IBM.

Note: Please direct any requests for copies of publications, or for assistance in using your IBM system, to your IBM representative or to the IBM branch office serving your locality.

Fold

Fold

BUSINESS REPLY MAIL
NO POSTAGE STAMP NECESSARY IF MAILED IN THE UNITED STATES

POSTAGE WILL BE PAID BY . . .

IBM Corporation
General Systems Division
Boca Raton, Florida 33432

Attention: Product and Programming Publications, Department 707

Fold

Fold



International Business Machines Corporation
Field Engineering Division
112 East Post Road, White Plains, N. Y. 10601

YOUR COMMENTS, PLEASE. . .

Your answers to the questions on the back of this form, together with your comments, will help us produce better publications for your use. Each reply will be carefully reviewed by the persons responsible for writing and publishing this material. All comments and suggestions become the property of IBM.

Note: Please direct any requests for copies of publications, or for assistance in using your IBM system, to your IBM representative or to the IBM branch office serving your locality.

Fold

Fold

BUSINESS REPLY MAIL
NO POSTAGE STAMP NECESSARY IF MAILED IN THE UNITED STATES

POSTAGE WILL BE PAID BY . . .

IBM Corporation
General Systems Division
Boca Raton, Florida 33432


Attention: Product and Programming Publications, Department 707

Fold

Fold



International Business Machines Corporation
Field Engineering Division
112 East Post Road, White Plains, N. Y. 10601

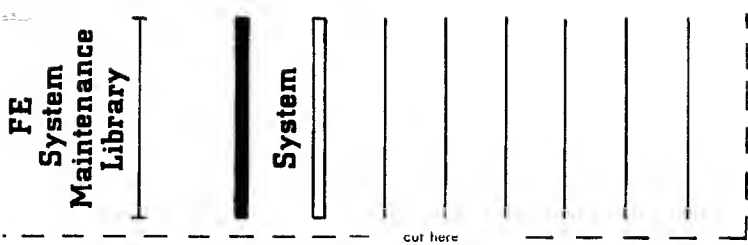

SY26-4003-3

